


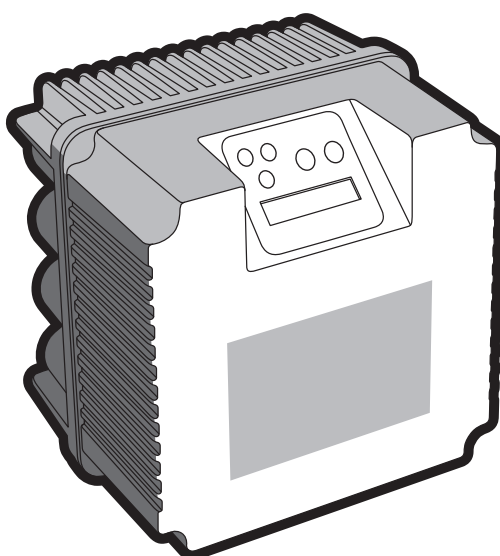

VASCO Solar - VArIable Speed COntroller

Installation, use and maintenance manual

V 5.1
22/02/2026

Copyright © Nastec srl

The information contained in this document may be changed without notice

Nastec srl, Via della Tecnica, 8, 36048, Barbarano Mossano, Vicenza, Italy, Tel. +39 0444 886289, Fax +39 0444 776099, info@nastec.eu, nastec.eu

Table of Contents

1. Introduction	5
1.1. Purpose of the manual	5
1.2. Product overview	5
2. Safety	6
2.1. Symbols	6
2.2. Qualified personnel	6
2.3. Safety warnings	6
2.4. Acoustic emission	8
2.5. Certifications	8
3. Maintenance	8
3.1. Maintenance	9
3.2. Warranty	9
3.3. Product registration	10
3.4. Spare parts	10
3.5. Disassembly and repair	10
3.6. Disposal	10
4. Transport and storage	11
4.1. Transport	11
4.2. Inspection on delivery	11
4.3. Handling	11
4.4. Storage	12
5. Technical features	12
5.1. Name	12
5.2. Technical Data	12
5.3. Dimensions and weight	14
5.4. Cables entry	14
6. Mechanical installation	14
6.1. Installation environment	15
6.2. Cooling	15
6.3. Wall installation	15
7. Electrical installation	17
7.1. Grounding	17
7.2. Protection devices	17
7.3. Connecting cables	18
7.3.1. Power cables	18
7.3.2. Control cables	19
7.4. Electromagnetic Compatibility (EMC)	19
7.5. Dimensioning of the photovoltaic system in MPH models	20
7.6. Electrical connections	20
7.6.1. Power connections	21
7.6.2. Control connections	27
8. Commissioning	28
8.1. Preliminary checks	28
8.2. Powering	29
9. Use and programming	29
9.1. Keyboard and display	29
9.2. Control via App	30
9.3. Initial set-up	30
9.4. FOC motor control	31
9.4.1. Introduction	31
9.4.2. FOC control calibration	31
9.4.3. Adjusting the FOC control	32
9.5. Initial display	33
9.5.1. Operating parameters	33
9.5.2. Diagnostics	33
9.6. Menu	34
9.7. Control parameters	34
9.8. Motor parameters	37

9.9. IN / OUT parameters	39
9.10. Connectivity parameters	41
9.11. Dry run protection	41
9.12. Pump stop under low irradiation conditions	43
9.12.1. Minimum frequency stop	43
9.12.2. Shutdown due to minimal irradiation	43
9.12.3. Stop for minimum flow	43
9.13. Control by flow switch	43
10. Constant pressure operation	44
10.1. Introduction	44
10.2. The pressure vessel	44
10.3. Electrical connections	45
11. Splitting the solar pumping system	45
11.1. Introduction.	45
11.2. Solar pumping unit with two or more pumps in COMBO Solar.	46
11.2.1. Cascade operating principle.	46
11.2.2. Electrical connections.	46
11.2.3. Programming the master unit.	46
11.2.4. Programming of slave units.	47
11.2.5. Automatic master replacement	47
12. "Extra Power" function	47
13. Alarms	48
14. Warnings	52
15. EC Declaration of Conformity	54
16. UK Declaration of Conformity	55

1. Introduction

1.1. Purpose of the manual

The purpose of this manual is to provide users with detailed information on the installation, operation, and maintenance of the product, with special regard to safety regulations.



WARNING

Read the manual carefully before installing and using the product.



WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.



NOTE


Store the manual in a protected and easily accessible place next to the installation location for possible consultation. A digital copy of this manual can be downloaded from the manufacturer's website or via the QR code shown on the product itself.



WARNING

At the time of installation and periodically, at least once a year, it is recommended to check the availability of firmware updates for the device using the control App. Updates may include additional features, enhancements to existing features, and bug fixes to improve system efficiency and reliability.

The complete installation, use and maintenance manual of the product, constantly updated in its contents, can be downloaded by scanning the QR code shown in the product with the smartphone camera and following the relative link.

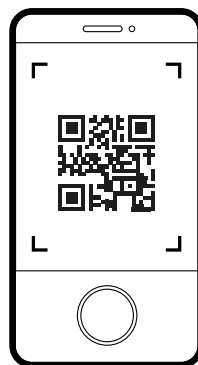

1.2. Product overview

The range of inverters VASCO Solar - VArIable Speed COntroller was created to power traditional pumping systems using photovoltaic energy. In this way, it is possible to convert old plants into renewable energy plants or to use the same pumps for power supply from the electricity grid in the creation of independent, economical and eco-sustainable water systems. VASCO Solar - VArIable Speed COntroller can convert the DC coming from panels into AC for the power supply of any electric pump.

The device also offers complete protection against overvoltage, overcurrent and dry runs.

In the application with photovoltaic panels, the MPPT (Maximum Power Point Tracking: tracking of the maximum power point) function allows maximizing the electrical power obtained from the panel or the quantity of water pumped for different irradiation and temperature conditions. When irradiation increases, the pump increases its running speed and the water flow increases as a consequence. When irradiation decreases (at the passage of clouds or at different times of the day), the pump reduces the frequency and consequently the flow rate, but continues to supply water until irradiation falls below the minimum necessary to guarantee operation.

In the MP (MultiPower) versions, the inverter can be powered in DC by photovoltaic panels or in AC by the grid or generator set to guarantee the operation of the pump at any time of day.

When installed, accessory HMA automatically manages the switching from one energy source to another based on multiple logics that can be selected by the user:

- irradiation level
- time of day
- achievement of the required daily flow rate
- remote control via digital input.

2. Safety

2.1. Symbols



TIP

This symbol indicates a TIP or recommendation.



NOTE

This symbol indicates a NOTE or an indication or concept to be emphasised.



CAUTION

This symbol indicates CAUTION, thus an indication which failure to respect can lead to minor or moderate damage.



WARNING

This symbol indicates a WARNING, thus an indication which, in the event of non-compliance, may lead to serious, even fatal damage to persons or things.



DANGER

This symbol indicates an ELECTRICAL HAZARD, which if not avoided will result in death or electrocution.

2.2. Qualified personnel



WARNING

The installation, use and maintenance of the product are strictly for qualified personnel who have undergone appropriate training. Any use by unqualified personnel must be carried out under the approval, responsibility, and close monitoring of the latter.



WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.



WARNING

Failure to comply with the instructions may lead to loss of warranty.



WARNING

Keep out of the reach of children.

2.3. Safety warnings



WARNING

During installation and use of the product, comply with the general safety regulations, working in a clean, dry environment, free of hazardous substances and using the appropriate accident prevention tools (gloves, helmet, goggles, shoes, and whatever else is necessary).

**WARNING**

The product is suitable for installation in industrial environments. In case of installation in a residential environment, it is recommended to adopt all the safety precautions required by local regulations.

**WARNING**

The unsuitable use of the product, non-original spare parts or tampering with the hardware and/or firmware of the product may lead to serious damage to property or persons in addition to the loss of warranty. The manufacturer waives all liability due to the improper use of its products.

**WARNING**

Before commissioning the product, ensure that the installation is safe and in accordance with local regulations.

**WARNING**

Comply with the provisions to meet EMC requirements.

**WARNING**

Use cables of the appropriate type and cross-section according to the electrical characteristics of the load, the ambient temperature and local regulations.

**WARNING**

Any insulation tests may only be performed in accordance with the manufacturer's instructions. Failure to do so may result in damage to the unit.

**CAUTION**

Electronic boards and components may be damaged by electrostatic discharge. We therefore, recommend to don't touch the components.

**CAUTION**

Take care during installation and electrical connection that no foreign bodies enter into the device.

**DANGER**

During the entire period in which the device is powered, regardless of whether it is operated or remains in stand-by (digital shutdown), high voltage is present inside the device and at the input and output terminals.

**DANGER**

The device, previously in stand-by condition, may suddenly start up following the reset of an alarm or changed system conditions. This may result in serious mechanical and electrical danger to the operator who, upon seeing the device stopped, may have intervened on it, on the load or on the system in which it is installed.

**DANGER**

Disconnect the device from the power supply, check that the load is completely stopped and wait at least 5 minutes before intervening on it or on the load applied to it.

**DANGER**

If the motor is of the permanent magnet type, the device may be energized by the passive rotation of the motor. In this case, both the power supply and the load should be disconnected before working on the device itself.

**DANGER**

Ensure that the device is fully closed and all fixing screws are properly tightened before supplying power. Do not remove the protective parts for any reason while the device is powered on.

**DANGER**

It is recommended to install the appropriate protection devices upstream of the device, such as a circuit breakers, fuses and a residual current device (RCD).

**DANGER**

Make sure that the device and the loads connected to it are properly grounded with the appropriate connection terminals before commissioning.

Ensure that the grounding system is compliant and refer to local regulations for grounding devices.

Each load must be fitted with its own earthing cable, the length of which must be as short as possible. Do not make interconnected grounding connections.

Leakage currents may exceed 3.5 mA. It is recommended to use the reinforced ground connection if necessary.

**CAUTION**

During operation, some surfaces may reach high temperatures that may cause burns upon contact with skin. Be very careful when touching the device!

Avoid contact with flammable products.

**WARNING**

Do not place any interrupting or switching devices between the inverter and the load. Interruption or switching during motor operation may cause serious damage to the device.

**WARNING**

Do not perform insulation tests on the load or power cable without first disconnecting them from the device.

**DANGER**

Pay attention as the photovoltaic panels exposed to sunlight supply a DC voltage to any connected devices.

**DANGER**

The open circuit voltage of the photovoltaic panels remains high even in low irradiation conditions. Verify that the power supply is completely and surely cut off before intervening on the loads of the photovoltaic system.

Failure to observe these instructions can cause serious damage to people and things, including death.

**WARNING**

Use the device only with pumps, do not use it with other types of loads.

2.4. Acoustic emission

The device has an acoustic emission:

<65 dB at a distance of 1 meter (3.28 ft) with cooling fans at maximum speed.

2.5. Certifications

The product has the following certifications:

- CE

3. Maintenance

3.1. Maintenance


WARNING

Before carrying out any work on the device, carefully read the chapter [Safety \[6\]](#) in the manual.


WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.


WARNING

Failure to comply with the instructions may lead to loss of warranty.

The device requires the following maintenance:

Intervention	Interval
Check that the unit is properly cooled, that the fans are functioning and that the cooling surfaces are clean	Every 6 months, or following a temperature alarm
Check for alarms	Every 12 months
Check the correct tightening of the power terminals	Every 12 months
Verify the maintenance of the protection rating (ingress of dust or water) by checking the tightening of the screws in the mechanical closing parts, the gaskets, and the cable glands.	Every 12 months


TIP

For more information contact the dealer or technical support at service@nastec.eu or by opening a support ticket on the portal service.nastec.eu

3.2. Warranty

Nastec guarantees that the products accompanied by this warranty are free from material or workmanship defects. The Company has the right to inspect any product returned under warranty, and confirm that the product contains a material or workmanship defect. The Company has the exclusive right to decide whether to repair or replace defective equipment, parts or components. To qualify for the warranty coverage, the buyer must return the product to the place of purchase. Subject to the terms and conditions listed below, the Company agrees to repair or replace any part of this product that has material or workmanship defects. The Company will evaluate products under warranty for 24 months from the date of installation (only in case of product registration) but no longer than 36 months from the date of invoice. IN NO EVENT shall the Company be liable for any other costs incurred by the customer in removing and/or fastening any product, part or component thereof. The Company reserves the right to change or improve its products or any part thereof, without being obliged to provide such a change or improvement for products previously sold. THIS WARRANTY DOES NOT APPLY to products damaged by natural events, including lightning, normal wear and tear, normal maintenance services, or any other condition beyond the control of the Company. THIS WARRANTY WILL BE VOIDED if any of the following conditions occurs:

- The product is used for purposes other than those for which it was designed and manufactured.
- The product has not been installed in accordance with applicable codes and rulings.
- The product has not been installed by qualified personnel.
- The item has been damaged due to negligence, abuse, misapplication, tampering, alteration, improper installation, operation, maintenance and storage.

If the customer wishes to make a warranty claim, it is necessary:

- Fill in the warranty claim on the service.nastec.eu portal
- Wait for the result from the Nastec technical support service. The outcome may envisage the following:
 - Absence of warranty based on the information received. A quotation for repair or spare parts may be made upon request.
 - Warranty advanced based on information received. Nastec will decide if the product is to be replaced under warranty. However, Nastec reserves the right to inspect the product.
 - Need to receive the product by the manufacturer in order to establish the potential warranty. Following the analysis of the returned product, Nastec will establish the unquestionable existence or absence of the warranty conditions by providing a detailed report on the damage found and its origins. If the warranty is applicable, Nastec will repair the device. Nastec is willing to refurbish the product upon offer. In the absence of a warranty,

Nastec will make an offer to repair and/or refurbish the device. After 60 days from the offer, if no response is received from the buyer, Nastec will scrap the product upon notice. Nastec does not cover any warranties provided by the buyer to third parties, without its prior authorization.

3.3. Product registration

By registering the product on the portal service.nastec.eu, it is possible to activate the manufacturer's warranty valid for 24 months from the registration date up to a maximum of 36 months from the date of manufacture, according to the warranty conditions. Registration must be completed within one month from the date of installation of the product.

The warranty is offered through the distribution chain. It is therefore necessary to specify the official distributor or importer from which the product was purchased. Alternatively, the distributor can register the product in the customer's name.

3.4. Spare parts

The manufacturer provides spare parts for the device. Contact your dealer for more information.



WARNING

It is recommended to use only original spare parts.



WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.



WARNING

Failure to comply with the instructions may lead to loss of warranty.

3.5. Disassembly and repair

If it is necessary to disassemble and repair the device, it is recommended that the safety instructions be strictly observed.



WARNING

The installation, use and maintenance of the product are strictly for qualified personnel who have undergone appropriate training. Any use by unqualified personnel must be carried out under the approval, responsibility, and close monitoring of the latter.



WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.



WARNING

Failure to comply with the instructions may lead to loss of warranty.



TIP

For more information contact the dealer or technical support at service@nastec.eu or by opening a support ticket on the portal service.nastec.eu

3.6. Disposal



Devices marked with this symbol cannot be disposed of in household waste but must be disposed of at appropriate waste drop-off centres. It is recommended to contact the Waste Electrical and Electronic Equipment drop-off centres (WEEE) in the area. If not disposed of properly, the product may have potential harmful effects on the

environment and on human health due to certain substances present within. Illegal or incorrect disposal of the product is subject to severe administrative and/or criminal penalties.

In compliance with the European WEEE Directive, the product is designed to allow the disassembly and separation of the main materials in order to facilitate their recovery and recycling at the end of their life.

General composition

The product consists mainly of:

- ferrous metals (frame, brackets, screws)
- aluminum (heatsinks and structural parts)
- copper (wiring, windings, printed circuit tracks)
- technical plastics (ABS, PC, PBT or equivalent)
- electronic boards (PCB)
- capacitors and power electronic components

Treatment guidelines

Disassembly operations must be carried out only by qualified personnel in compliance with the safety requirements set out in the appropriate section of this manual

Proceed as follows:

1. completely disconnect the product from any power source
2. remove the outer casings and covers
3. Separate metal and plastic parts and wiring
4. dispose of electronic boards, capacitors and electronic components as special WEEE waste according to current local regulations

Recoverable materials must be sent to normal recycling processes.

Additional technical information may be provided upon request to authorized treatment centers.

4. Transport and storage

4.1. Transport

Avoid subjecting the product to severe shocks or extreme weather conditions during transport. The packaging must remain dry and at a temperature between -20°C (-4°F) and +70°C (+158°F). Do not stack packages without first checking feasibility with the manufacturer.



TIP

It is advisable to always indicate FRAGILE on the packaging

4.2. Inspection on delivery

Upon receipt of the product, check:

- the integrity of the packaging
- the integrity of the content
- the presence of all components

In case of problems, notify the forwarder immediately.



WARNING

The manufacturer declines all responsibility for damage to the product due to transport

4.3. Handling

The product must be handled by hand or using suitable lifting equipment in relation to its weight and the regulations in force.

If necessary, use dedicated handling equipment (cranes, ropes, trolleys), using the lifting points provided in the product.

During handling it is recommended to:

- Handle with care
- keep away from suspended loads
- always wear accident prevention equipment
- be careful not to damage electrical cables

Do not handle the product using electrical cables as lifting gear.



WARNING

Failure to follow the instructions may result in damage to the product, the system in which it is installed and, in the worst cases, damage to property or persons with even fatal consequences.

4.4. Storage

The product must be stored in its packaging in a dry place, without sudden changes in humidity and temperature and protected from mechanical (weights, vibrations), thermal and chemical agents.

The temperature of the storage environment must be between -20°C (-4°F) and 70°C (+158°F) with a maximum relative humidity of 85% (non-condensing).

If the product remains in stock for more than 24 months from the manufacturing date shown on the packaging, it is necessary to check the mechanical integrity of its parts and supply power to it at least once every 12 months.

If the product is put back into storage after it has been used, it is advisable to contact the manufacturer for further information on storage.



TIP

For more information contact the dealer or technical support at service@nastec.eu or by opening a support ticket on the portal service.nastec.eu

5. Technical features

5.1. Name

VSABCD (MP) - EFGH

- **VS**: Product name
- **MP**: If present, it indicates that the device can be powered both with DC (panels) and AC (mains or generator set)
- **A**: Nominal AC supply voltage (2 = 1x230 VAC, 3 = 3x230 VAC, 4 = 3x400 VAC)
- **BCD** Rated output current
- **EF**: Customization code (01 = standard customization)
- **G**: Mounting kit included in the package (0 = none, 1 = motor, 2 = wall, 3 = motor+wall)
- **H**: Pressure sensor included in the package (0 = none, 1 = pressure sensor 0-16 bar)

5.2. Technical Data

Electrical specifications by model:

Model	Vin DC [VDC]	Vin AC * [VAC]	Vnom ** [VDC]	Max V out [VAC]	Max I out [A]	Typical motor P2***		Maximum efficiency [%]	Size
VS212	160 – 650	3 x 190 - 520	320	3 x 250	12	3 x 230 VAC	2,2 kW	97	2
VS409	320 – 850	3 x 190 - 520	560	3 x 460	9	3 x 400 VAC	3 kW	97	2
VS412	320 – 850	3 x 190 - 520	560	3 x 460	12	3 x 400 VAC	4 kW	97	2
VS415	320 – 850	3 x 190 - 520	560	3 x 460	15	3 x 400 VAC	5,5 kW	97	2
VS418	320 – 850	3 x 190 - 520	560	3 x 460	18	3 x 400 VAC	7,5 kW	97	2
VS425	320 – 850	3 x 190 - 520	560	3 x 460	25	3 x 400 VAC	11 kW	97	2
VS430	320 – 850	3 x 190 - 520	560	3 x 460	30	3 x 400 VAC	15 kW	97	2
VS438	320 – 850	3 x 190 - 520	560	3 x 460	38	3 x 400 VAC	18,5 kW	98	3
VS448	320 – 850	3 x 190 - 520	560	3 x 460	48	3 x 400 VAC	22 kW	98	3
VS465	320 – 850	3 x 190 - 520	560	3 x 460	65	3 x 400 VAC	30 kW	98	3
VS485	320 – 850	3 x 190 - 520	560	3 x 460	85	3 x 400 VAC	37 kW	98	3

Model	Vin DC [VDC]	Vin AC * [VAC]	Vnom ** [VDC]	Max V out [VAC]	Max I out [A]	Typical motor P2***		Maximum efficiency [%]	Size
VS4100	320 – 850	3 x 190 - 520	560	3 x 460	100	3 x 400 VAC	45 kW	98	3
VS4118	320 – 850	3 x 190 - 520	560	3 x 460	118	3 x 400 VAC	55 kW	98	3
VS4158	320 – 850	3 x 190 - 520	560	3 x 460	158	3 x 400 VAC	75 kW	98	4
VS4198	320 – 850	3 x 190 - 520	560	3 x 460	198	3 x 400 VAC	90 kW	98	4
VS4228	320 – 850	3 x 190 - 520	560	3 x 460	228	3 x 400 VAC	110 kW	98	4
VS4268	320 – 850	3 x 190 - 520	560	3 x 460	268	3 x 400 VAC	132 kW	98	4

* AC power supply available only for MP (MultiPower) and MPH (MultiPower Hybrid) models

**Minimum voltage for nominal performances.

*** Typical motor power. Refer to the motor rated current when selecting the model.

General electrical specifications:

Power supply frequency	50 / 60 Hz (+/- 2%)
Voltage unbalance between the power supply phases	+/- 2%
Maximum output frequency	300 Hz
Overvoltage category	III
EMC compliance	EN 61800-3 C2
Energy efficiency class (according to EN61800-9-2)	IE2

Environmental specifications:

Relative humidity of the operating environment	5 - 95 % non-condensing
Workplace temperature	from -10 °C (14 °F) to 60 °C (140 °F)
Maximum workplace temperature at nominal load	50°C (122 °F)
Power derating beyond maximum temperature	-2.5% every °C (-1.4% every °F)
Maximum altitude at nominal load	1000 m (3280 ft)
Power derating beyond maximum altitude	- 1% every 100 m (328 ft)

Mechanical specifications:


Protection rating	IP66 (NEMA 4X) IP54 (NEMA 12) sizes 3 & 4
Resistance to vibrations	EN60068-2-6:2008, EN60068-2-27:2009, EN60068-2-64:2008,



WARNING

Protect the device from direct exposure to weather and sunlight.

5.3. Dimensions and weight

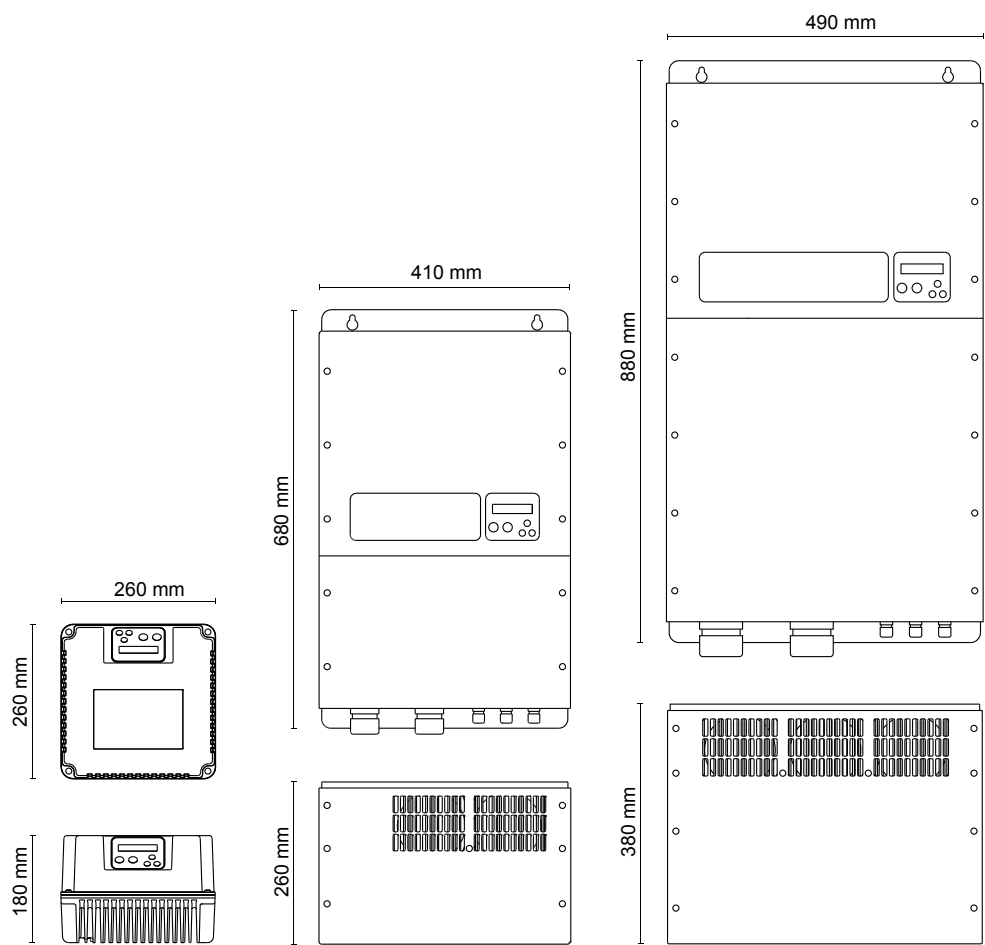

Size	Maximum weight [kg]
2	9
3	40
4	80

5.4. Cables entry

Cable gland	Tightening torque [Nm]	Cable diameter [mm]	Size 2	Size 3	VS4118	Size 4	VS4228VS4268
M12	2,71,5	3,5-7	-	9	9	9	9
M16	5	5-10	4	-	-	-	-
M20	7	7-13	-	-	-	-	-
M25	7,5	10-17	2	-	-	-	-
M40	8	19 -28	-	2	-	-	-
M50	15	27 -35	-	-	2	-	-
M63	15	34 -45	-	-	-	2	-
M75	30	58 – 68	-	-	-	-	2

6. Mechanical installation



WARNING

Read the safety chapter carefully before continuing.

6.1. Installation environment



WARNING

The environmental specifications stated in the technical data of the product must be strictly complied with.



WARNING

Do not install the device in environments at a risk of explosion, flooding, or in the presence of flammable fluids or solids. Ensure sufficient ventilation in the room.

Refer to local regulations when selecting the appropriate installation location.



WARNING

The degree of protection of the device is only ensured if, at the end of the installation, the cover screws and the cable glands have been properly tightened. Close the holes of unused cable glands with the appropriate plugs.

Device	Tightening torque of the screws between the base and the heatsink
VASCO - VArIable Speed COntroller	3 Nm - 2,2 ftlbs
Size 2	

Protect the device from direct exposure to weather and sunlight.

Do not leave the device installed without cover or with the cable glands open, even if not connected to the power supply. The infiltration of dust, water or humidity may irreparably damage the device.



WARNING

To ensure uninterrupted operation, the device can gradually and automatically reduce performance before shutting down following over-temperature. However, prolonged operation above the rated temperature leads to a reduction in the life of the device.

6.2. Cooling

The device is cooled primarily by forced air circulation through the heat sink element.

In addition to the heat sink, the device also uses the remaining surfaces to cool itself. It is therefore necessary to ensure sufficient space around the device during installation.

In particular, the distance between the suction and discharge side of the heat sink and the other surfaces must be at least:

- 150 mm (5,9") for current intensity up to 18 A
- 250 mm (9,8") for current intensity up to 118 A
- 300 mm (11,8") for current intensity up to 268 A

On the other sides, maintain a minimum distance of 100 mm (3,9") to ensure cooling and to make installation and maintenance operations easier.



During operation, the surfaces of the device can become hot enough to cause burns. Do not touch them.

In the case of installation inside electric cabinet, it is necessary to guarantee the appropriate air flow for the heat dissipation of all the components. The heat released by the device may be calculated from its conversion efficiency.




WARNING

Do not place any heat-generating elements (outlet filters) on the suction side of the device to prevent dangerous overheating.


6.3. Wall installation


The device is installed on the wall and cooled by the ventilation system supplied in the special wall kit.

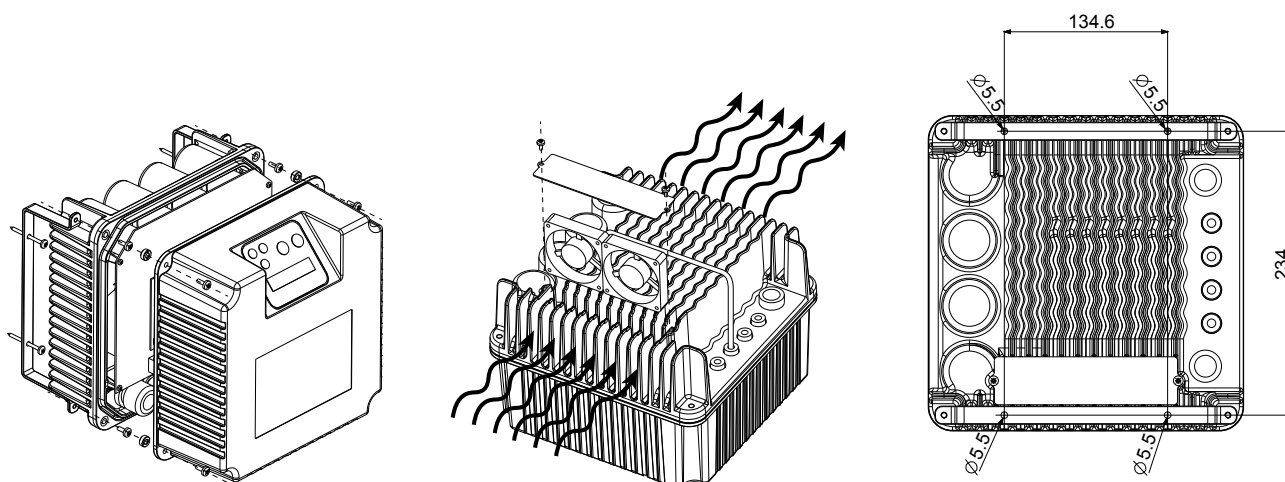Wall kit for size 2 devices

The kit includes:

- No. 2 12 VDC fans. To ensure that the unit cools down correctly, respect the flow direction indicated in the figure when assembling the fans.
- No. 1 fan cover
- No. 2 screws for fastening the fan cover to the heat sink.
- No. 2 wall fastening brackets with relative template.
- No 4 M5 screws for fastening the device to the brackets.

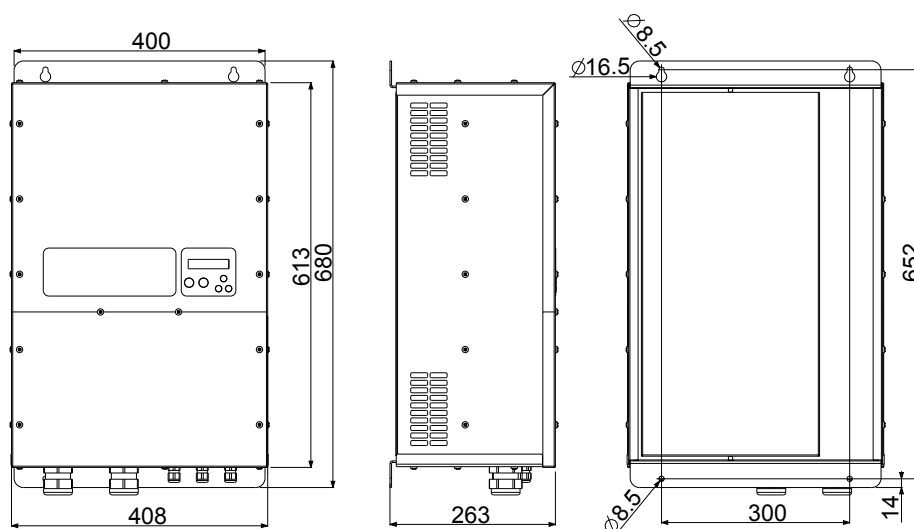Wall installation for size 3 devices

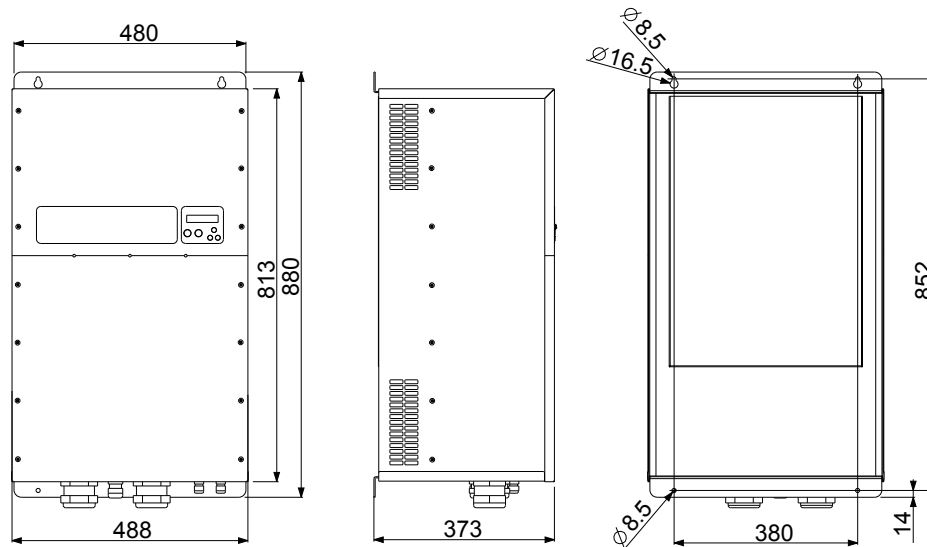Wall installation for size 4 devices

7. Electrical installation

**WARNING**

Read the safety chapter carefully before continuing.

7.1. Grounding

**DANGER**

Make sure that the device and the loads connected to it are properly grounded with the appropriate connection terminals before commissioning.

Ensure that the grounding system is compliant and refer to local regulations for grounding devices.

Each load must be fitted with its own earthing cable, the length of which must be as short as possible. Do not make interconnected grounding connections.

Leakage currents may exceed 3.5 mA. It is recommended to use the reinforced ground connection if necessary.

Use the following minimum cross-sections for ground cables:

- cross-section equal to the mains power cable cross-section up to 16 mm². (6 AWG)
- 16 mm² (6 AWG) for mains power cable cross-section between 16 mm² (6 AWG) and 35 mm² (1 AWG).
- cross-section equal to half the cross-section of the power supply cable when the latter is greater than 35 mm² (1 AWG).

7.2. Protection devices

**DANGER**

It is recommended to install the appropriate protection devices upstream of the device, such as a circuit breakers, fuses and a residual current device (RCD).

Fuses and switches.

The control device can protect the motor from overloads by digitally controlling the absorbed current against the set rated current.

It is therefore not necessary to install any overload protection device between the inverter and the motor.

Instead, it is necessary to install overcurrent and short-circuit protection devices, such as fuses and circuit breakers, upstream of the device. These trigger in the event of failure of a component inside the device.

Install on the AC supply:


Supply voltage	Model	Recommended fuse gG	Recommended circuit breaker
3 x 190 - 520 VAC	VS212 MP	16	ABB MCB S203-C10
3 x 190 - 520 VAC	VS409 MP	16	ABB MCB S203-C16
3 x 190 - 520 VAC	VS412 MP	16	ABB MCB S203-C16
3 x 190 - 520 VAC	VS415 MP	20	ABB MCB S203-C20
3 x 190 - 520 VAC	VS418 MP	25	ABB MCB S203-C25
3 x 190 - 520 VAC	VS425 MP	30	ABB MCB S203-C32
3 x 190 - 520 VAC	VS430 MP	35	ABB MCB S203-C40
3 x 190 - 520 VAC	VS438 MP	50	ABB MCB S203-C50
3 x 190 - 520 VAC	VS448 MP	63	ABB MCB S203-C63
3 x 190 - 520 VAC	VS465 MP	80	ABB MCB S203-C80
3 x 190 - 520 VAC	VS485 MP	100	ABB MCB S203-C100
3 x 190 - 520 VAC	VS4100 MP	160	SACE FORMULA 160
3 x 190 - 520 VAC	VS4118 MP	160	SACE FORMULA 160
3 x 190 - 520 VAC	VS4158 MP	200	SACE FORMULA 200
3 x 190 - 520 VAC	VS4198 MP	250	SACE FORMULA 250
3 x 190 - 520 VAC	VS4228 MP	250	SACE FORMULA 250
3 x 190 - 520 VAC	VS4268 MP	315	SACE FORMULA 320

Residual Current Devices (RCD)

For inverter devices with single-phase power supply, use AC-sensitive RCD devices of both sine and pulse types. The devices listed are, in order of priority:

- type F, marked with the symbols  capable of detecting high-frequency currents up to 1 kHz.
- type A-APR, marked with the symbols  characterized by a slight intervention delay.
- type A, marked with the symbols 

For inverter devices with three-phase power supply, use RCD devices that are sensitive to both alternating and direct current. The following are suitable devices:

- Type B, marked with the symbols 

Install on the DC supply:

- DC disconnect of suitable voltage and current
- DC fuses of suitable voltage and current on both the positive and negative poles. Generally, DC fuses are chosen for a current that is approximately double the short-circuit current of a string of panels and are installed only if the photovoltaic system consists of three or more strings.
- surge arresters of suitable voltage and current

7.3. Connecting cables



WARNING

The connecting cables must comply with local regulations, feature the appropriate cross-section, and meet the requirements for voltage, current, and temperature.

7.3.1. Power cables

Model	Maximum cross-section of the input cable with ground	Maximum cross-section of the output cable with ground	Cable tightening torque [Nm]	Ground cable tightening torque [Nm]
VS212	4 x 6 mm ²	4 x 6 mm ²	1	3
VS409	4 x 6 mm ²	4 x 6 mm ²	1	3
VS412	4 x 6 mm ²	4 x 6 mm ²	1	3

Model	Maximum cross-section of the input cable with ground	Maximum cross-section of the output cable with ground	Cable tightening torque [Nm]	Ground cable tightening torque [Nm]
VS415	4 x 6 mm ²	4 x 6 mm ²	1	3
VS418	4 x 6 mm ²	4 x 6 mm ²	1	3
VS425	4 x 6 mm ²	4 x 6 mm ²	1,5	3
VS430	4 x 6 mm ²	4 x 6 mm ²	1,5	3
VS438	4 x 16 mm ²	4 x 16 mm ²	3	3
VS448	4 x 16 mm ²	4 x 16 mm ²	3	3
VS465	4 x 35 mm ²	4 x 35 mm ²	4	4
VS485	4 x 35 mm ²	4 x 35 mm ²	4	4
VS4100	4 x 35 mm ²	4 x 35 mm ²	4	4
VS4118	4 x 35 mm ²	4 x 35 mm ²	4	4
VS4158	4 x 50 mm ²	4 x 50 mm ²	20	20
VS4198	4 x 50 mm ²	4 x 50 mm ²	20	20
VS4228	4 x 95 mm ²	4 x 95 mm ²	20	20
VS4268	4 x 95 mm ²	4 x 95 mm ²	20	20

**WARNING**

Use unshielded cables for input cables and shielded cables for output cables.

**WARNING**

Always use cables with appropriate cable lugs, which may be supplied with the product.

**WARNING**

For motor cable lengths greater than 5 meters, the use of special output filters, available on request, is recommended.

7.3.2. Control cables

Model	Maximum cross-section of the control cables	Tightening torque [Nm]
Control terminals of all models	1 mm ² (16 AWG)	0,5 Nm (0,37 ftlbs)

**WARNING**

Use shielded cable for control cables.

**WARNING**

Always use cables with appropriate cable lugs, which may be supplied with the product.

7.4. Electromagnetic Compatibility (EMC)

The device meets the electromagnetic compatibility requirements according to the regulations.

However, to ensure the electromagnetic compatibility of the system in which it is installed, it is necessary:

- use ground connection cables that are as short as possible.
- use motor cables that are as short as possible and shielded, with the shield connected at both ends.
- use shielded signal cables with the shield connected at one end only.

**WARNING**

Install signal, motor, and power cables separately from each other at a distance of at least 30 cm (11,8"). If the signal cables meet the power cables, cross them perpendicularly.

**WARNING**

It is possible to remove the connection of the filter capacitors C_y to the ground by removing the screws marked with the EMC symbol. In this way, the ground leakage currents caused by the filter are reduced, but the intrinsic EMC compatibility of the device is no longer valid and must therefore be guaranteed externally in another way.

In case of installation in an IT system, it is recommended to remove the screws marked with the EMC symbol and install an external insulation controller. Photovoltaic systems fall into the IT category.

7.5. Dimensioning of the photovoltaic system in MPH models

In the MPH models it is possible to power the device simultaneously via DC (photovoltaic panels) and AC (network or generator). In this way, the pump is operated mainly using the DC source and adding the AC input in the right amount necessary to meet operating needs. This configuration is referred to as MPH (MultiPower Hybrid)

The DC input is directly connected to the internal bus and there is no DC/DC regulation stage.

For this reason, it is essential that the voltage of the photovoltaic string is correctly sized with respect to the connected AC supply voltage, according to the following conditions:

- $V_{mp} \geq V_{AC} \times 1.5$ to optimize the use of the photovoltaic source.
- $V_{oc} < 850$ VDC to comply with the maximum DC input voltage limit

where:

- V_{mp} : nominal operating voltage of the photovoltaic string
- V_{oc} : open circuit voltage of the photovoltaic string
- V_{AC} : supply voltage in AC

If the first condition cannot be fulfilled, it is sufficient to comply with the second. In this case, the photovoltaic source will not be fully optimized, but it will still help to reduce the energy taken from the grid or generator

Examples:

With a 3×230 VAC power supply, the photovoltaic string should have $V_{mp} \geq 345$ VDC.

With a 3×400 VAC power supply, the photovoltaic string should have $V_{mp} \geq 600$ VDC.


With a 3×460 VAC power supply, the photovoltaic string should have $V_{mp} \geq 690$ VDC.

In all cases, even if the condition relating to V_{mp} cannot be satisfied, the open circuit voltage of the photovoltaic string (V_{oc}) must remain less than 850 VDC.

7.6. Electrical connections

7.6.1. Power connections

VS212 MP , VS409 MP, VS412 MP , VS415 MP , VS418 MP

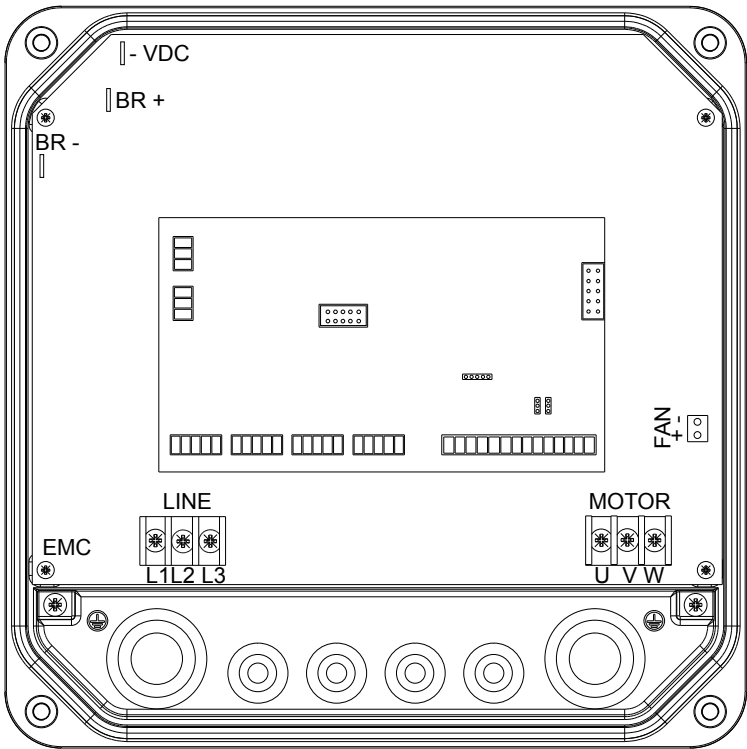

		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply LINE	L1	50	Fork for M4 screw	
	L3	50	Fork for M4 screw	
	P.E. ⊕	100	Eyelet for M4 screw	
AC Power Supply LINE	L1	50	Fork for M4 screw	
	L2	50	Fork for M4 screw	
	L3	50	Fork for M4 screw	
	P.E. ⊕	100	Eyelet for M4 screw	
Motor MOTOR	U	50	Fork for M4 screw	
	V	50	Fork for M4 screw	
	W	50	Fork for M4 screw	
	P.E. ⊕	100	Eyelet for M4 screw	



NOTE

When connecting the DC power supply, it is not necessary to respect the polarity.



DANGER


Connect only one power source at a time (AC or DC).



NOTE

The VENT terminal: -, + powers the 12 VDC auxiliary fans supplied in the wall kit.

VS425 MP , VS430 MP

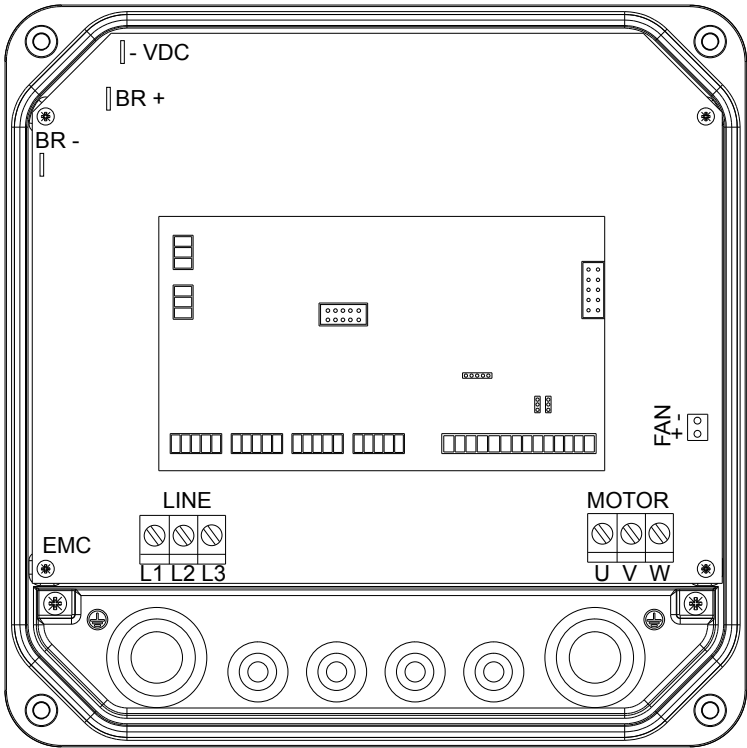

		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply LINE	L1	50	Tip	
	L3	50	Tip	
	P.E. ⊕	100	Eyelet for M4 screw	
AC Power Supply LINE	L1	50	Tip	
	L2	50	Tip	
	L3	50	Tip	
	P.E. ⊕	100	Eyelet for M4 screw	
Motor MOTOR	U	50	Tip	
	V	50	Tip	
	W	50	Tip	
	P.E. ⊕	100	Eyelet for M4 screw	



NOTE
When connecting the DC power supply, it is not necessary to respect the polarity.




DANGER
Connect only one power source at a time (AC or DC).



NOTE
The VENT terminal: -, + powers the 12 VDC auxiliary fans supplied in the wall kit.

VS438 , VS448 , VS465 , VS485 , VS4100 , VS4118

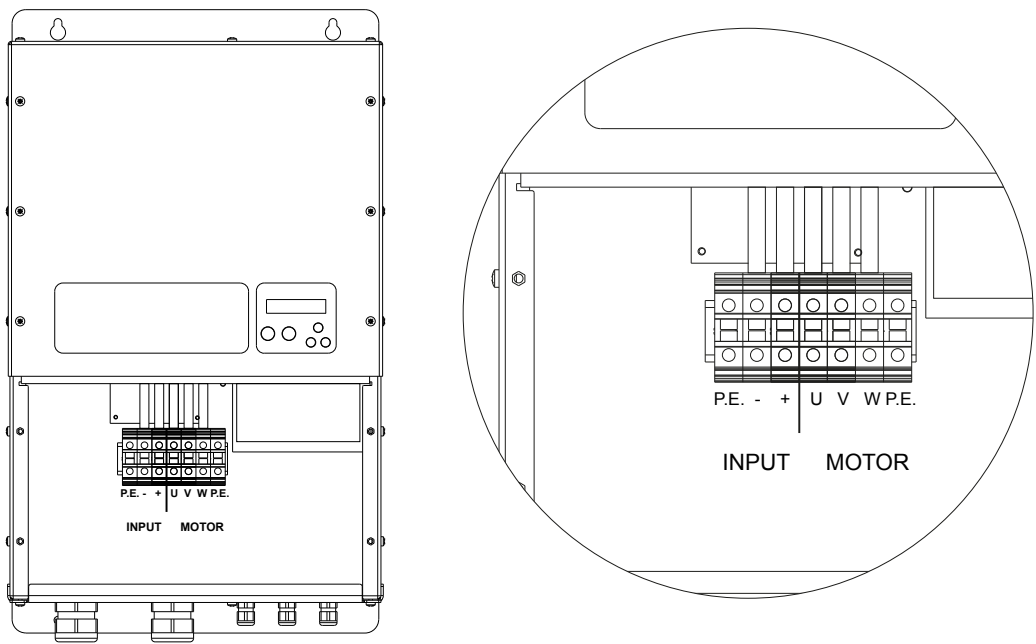


		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply INPUT	P.E. ⊕	140	Tip	
	-	140	Tip	
	+	140	Tip	
Motor MOTOR	U	140	Tip	
	V	140	Tip	
	W	140	Tip	
	P.E. ⊕	140	Tip	



DANGER

When connecting the DC power supply, the polarity must be respected.

VS438 MP , VS448 MP , VS465 MP , VS485 MP , VS4100 MP , VS4118 MP , VS438 MPH , VS448 MPH , VS465 MPH , VS485 MPH , VS4100 MPH , VS4118 MPH

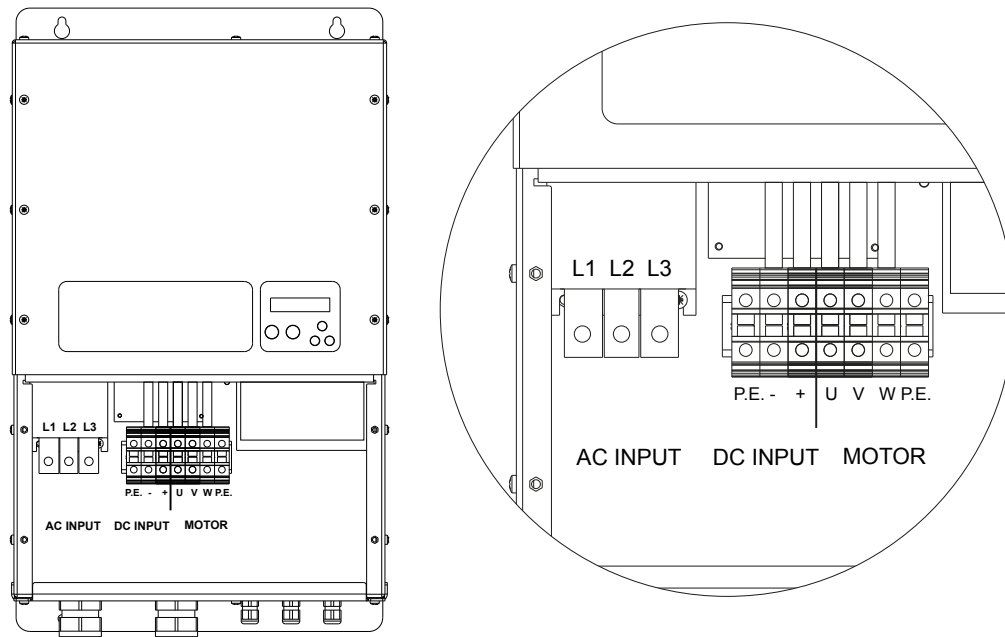

		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply LINE	P.E. ⊕	140	Tip	
	-	140	Tip	
	+	140	Tip	
AC Power Supply LINE	L1	140	Tip	
	L2	140	Tip	
	L3	140	Tip	
Motor MOTOR	P.E. ⊕	140	Tip	
	U	140	Tip	
	V	140	Tip	
	W	140	Tip	
	P.E. ⊕	140	Tip	

**DANGER**

When connecting the DC power supply, the polarity must be respected.

**DANGER**

In MP (MultiPower) models, connect only one power source at a time (AC or DC).

In MPH (MultiPower Hybrid) models, both AC and DC power can be connected at the same time.

**DANGER**

In the MPH (MultiPower Hybrid) models there is no galvanic separation between the AC and DC power supply.


In the case of simultaneous use of AC and DC, the following conditions must be respected:

- Do not electrically connect any potential of the photovoltaic field (negative, positive or any intermediate string point) to the ground. Connect only the frame and the supporting structure of the photovoltaic panels to the ground
- use only Class II photovoltaic panels (double insulation) according to EN61730.
- Install DC disconnect switch with fuse protection (negative and positive) for each string and AC disconnect switch with relative protections (fuses, magnetothermic, RCD).

In case of maintenance on the AC or DC side, it is mandatory to disconnect both power sources.

If galvanic separation between the AC and DC power supply is required, it is necessary to provide it through an appropriate isolation transformer.

VS4158 , VS4198 , VS4228 , VS4268

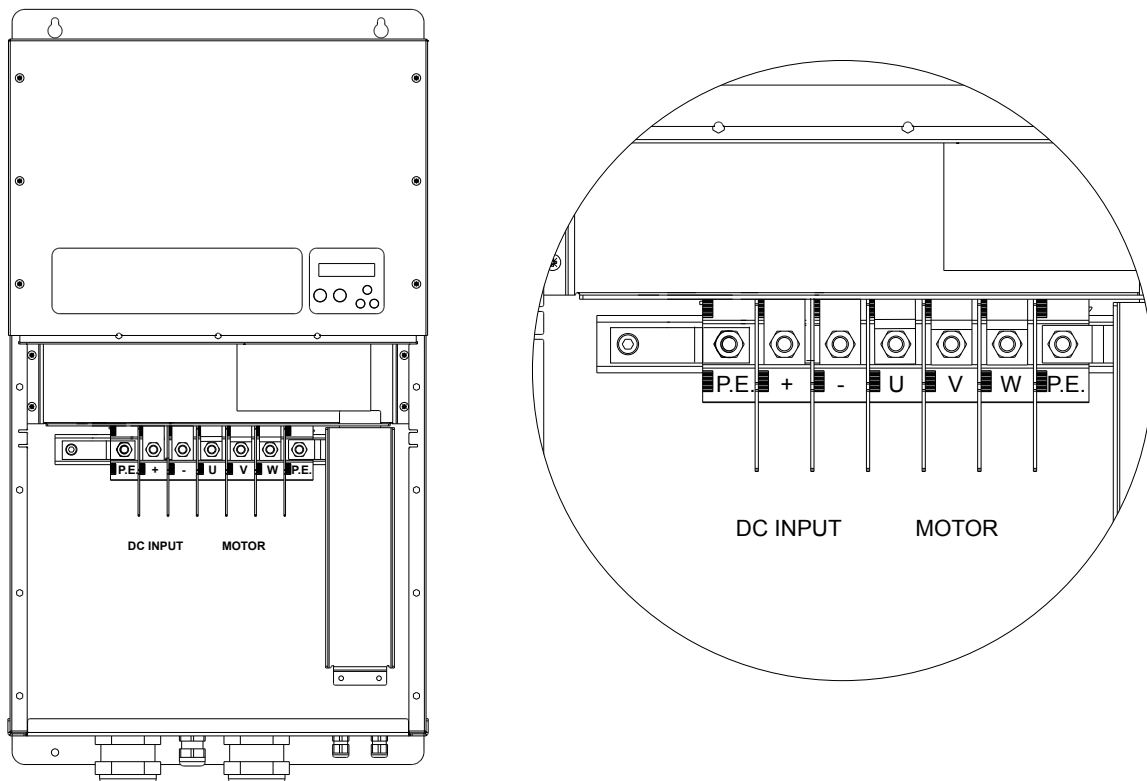


		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply DC INPUT	P.E. ⊕	360	Eyelet for M10 screw	
	+	360	Eyelet for M10 screw	
	-	360	Eyelet for M10 screw	
Motor MOTOR	U	360	Eyelet for M10 screw	
	V	360	Eyelet for M10 screw	
	W	360	Eyelet for M10 screw	
	P.E. ⊕	360	Eyelet for M10 screw	



DANGER

When connecting the DC power supply, the polarity must be respected.

VS4158 MP , VS4198 MP , VS4228 MP , VS4268 MP , VS4158 MPH , VS4198 MPH , VS4228 MPH , VS4268 MPH

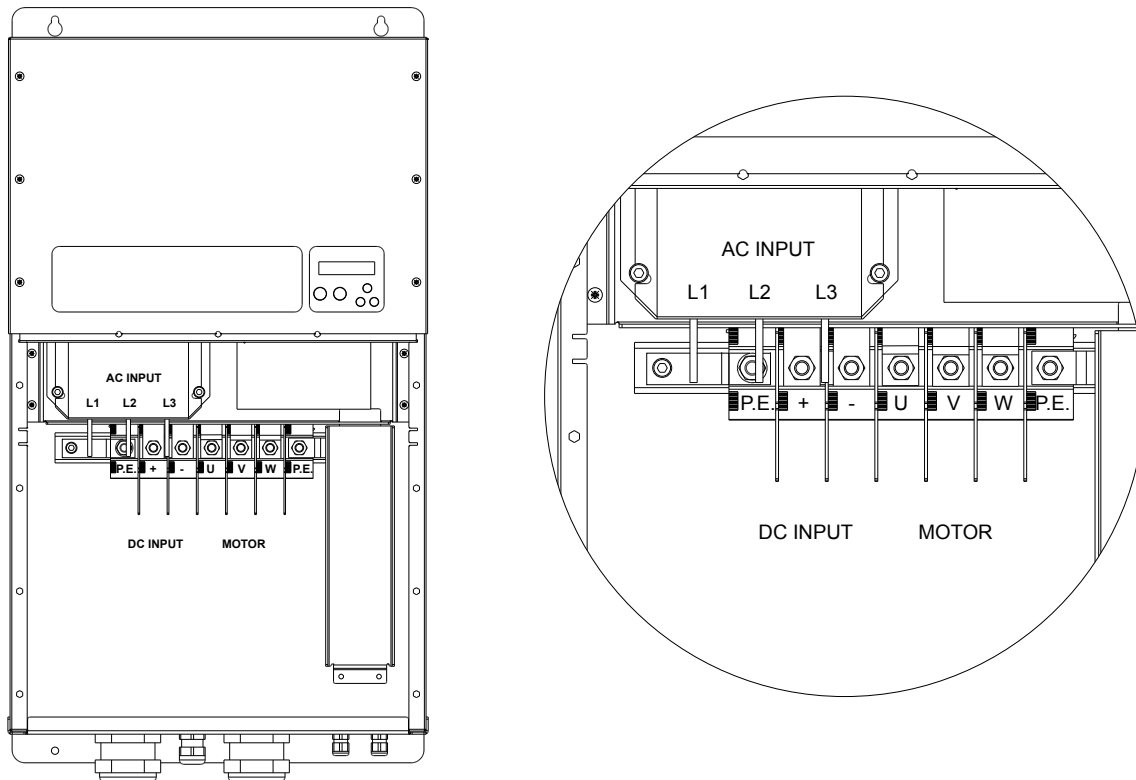

		A [mm]	Pre-insulated cable lug	Stripping diagram
DC Power Supply DC INPUT	P.E. ⚡	360	Eyelet for M10 screw	
	+	360	Eyelet for M10 screw	
	-	360	Eyelet for M10 screw	
AC Power Supply AC INPUT	L1	360	Eyelet for M10 screw	
	L2	360	Eyelet for M10 screw	
	L3	360	Eyelet for M10 screw	
Motor MOTOR	P.E. ⚡	360	Eyelet for M10 screw	
	U	360	Eyelet for M10 screw	
	V	360	Eyelet for M10 screw	
	W	360	Eyelet for M10 screw	
	P.E. ⚡	360	Eyelet for M10 screw	

**DANGER**

When connecting the DC power supply, the polarity must be respected.

**DANGER**

In MP (MultiPower) models, connect only one power source at a time (AC or DC).

In MPH (MultiPower Hybrid) models, both AC and DC power can be connected at the same time.

**DANGER**

In the MPH (MultiPower Hybrid) models there is no galvanic separation between the AC and DC power supply.

In the case of simultaneous use of AC and DC, the following conditions must be respected:


- Do not electrically connect any potential of the photovoltaic field (negative, positive or any intermediate string point) to the ground. Connect only the frame and the supporting structure of the photovoltaic panels to the ground
- use only Class II photovoltaic panels (double insulation) according to EN61730.
- Install DC disconnect switch with fuse protection (negative and positive) for each string and AC disconnect switch with relative protections (fuses, magnetothermic, RCD).

In case of maintenance on the AC or DC side, it is mandatory to disconnect both power sources.

If galvanic separation between the AC and DC power supply is required, it is necessary to provide it through an appropriate isolation transformer.

7.6.2. Control connections

The control board is common for all models.

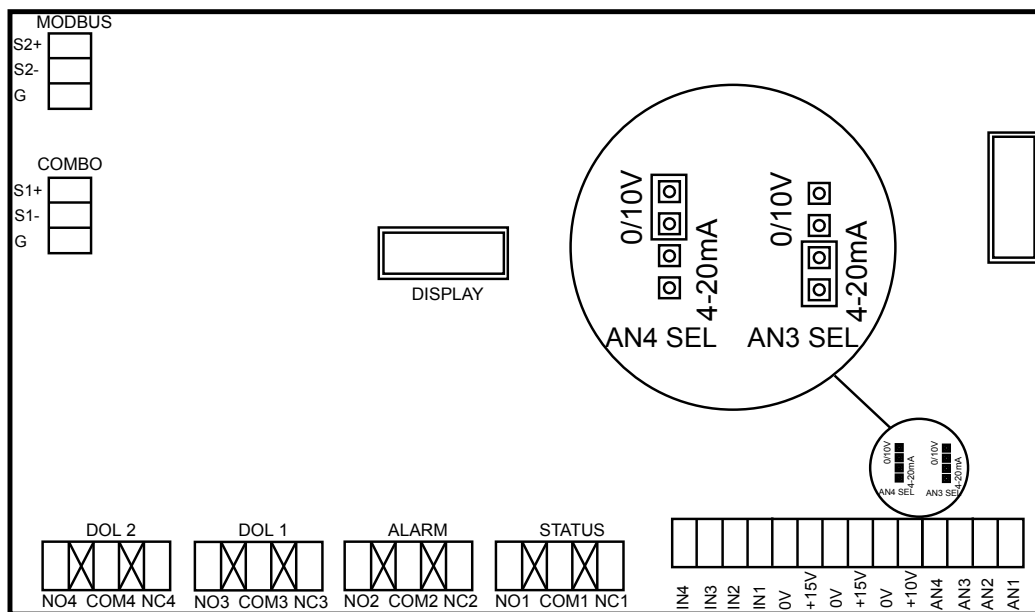

Type		Description	Functionality	Comments
Analog inputs	AN1	4-20 mA	Sensor 1	-
	AN2	4-20 mA	Sensor 2	-
			Solarimeter	
			Analog flow meter	
	AN3	4-20 mA 0-10 V	External set value Pulse flow meter	Configurable as 4-20 mA or 0-10V via jumper.
	AN4	4-20 mA 0-10 V	External frequency External set value 2	Configurable as 4-20 mA or 0-10V via jumper.
Power Supply	+15V	15 VDC, max 100 mA	Power supply for 4-20 mA analog inputs	Do not use as a power supply for the digital inputs!
Power Supply	+10V	10 VDC, max 3 mA	Power supply for 0-10 V analog inputs	Do not use as a power supply for the digital inputs!
Signal GND	0V	Insulated	Signal GND for analog and digital inputs	-
Digital inputs	IN1	Active low	Motor start and stop	Programmable as Normally Open or Normally Closed.
	IN2	Active low	Motor start and stop Switching of set value 1 and 2 Switching of work frequency 1 and 2 Flow switch functionality	Programmable as Normally Open or Normally Closed.

Type		Description	Functionality	Comments
	IN3	Active low	Motor start and stop Switching of sensors 1 and 2 Emergency mode	Programmable as Normally Open or Normally Closed.
	IN4	Active low	Alarms reset Motor start and stop Switch between main and auxiliary control modes	Programmable as Normally Open or Normally Closed.
Relay outputs	NO1	Normally Open	STATUS relay	Potential-free contacts
	COM1	Common	NO1, COM1: closed contact with motor running.	Max 250 VAC, 2 A
	NC1	Normally Closed	NC1, COM1: closed contact with motor stopped.	Max 30 VDC, 2 A
Relay outputs	NO2	Normally Open	ALARM relay	Potential-free contacts
	COM2	Common	NO2, COM2: closed contact without alarm.	Max 250 VAC, 2 A
	NC2	Normally Closed	NC2, COM2: closed contact with alarm or without power supply.	Max 30 VDC, 2 A
Relay outputs	NO3	Normally Open	DOL1 Relay	Potential-free contacts
	COM3	Common	NO3, COM3: contact closed to start the DOL1 pump.	Max 250 VAC, 2 A
	NC3	Normally Closed	NC3, COM3: contact open to start the DOL1 pump.	Max 30 VDC, 2 A
Relay outputs	NO4	Normally Open	DOL2 Relay	Potential-free contacts
	COM4	Common	NO4, COM4: contact closed to start the DOL2 pump.	Max 250 VAC, 2 A
	NC4	Normally Closed	NC4, COM4: contact open to start the DOL2 pump.	Max 30 VDC, 2 A
RS485 serial port	S1+	Positive	Communication	-
	S1-	Negative	COMBO	-
	G	Serial GND		The serial GND is isolated from the signal GND
RS485 serial port	S2+	Positive	Communication	-
	S2-	Negative	MODBUS RTU	-
	G	Serial GND	BACnet (if available)	The serial GND is isolated from the signal GND

8. Commissioning

8.1. Preliminary checks

Before supplying power to the device, carry out the following electrical and mechanical checks:

- Check that the device complies with the motor control according to its data plate.
- Verify proper grounding of the device, of the load, and of the entire system.
- Check the correct connection of the power supply cable and the motor cable, paying particular attention to any connection reversal.
- Check the correct connection of the power and signal cables, paying particular attention to any polarity.
- Check that the connection terminals of the power and signal cables are correctly tightened.
- Check the implementation of electromagnetic compatibility (EMC) regulations and the correct connection of cable shields.
- Check that the protective devices are present and correctly installed.
- Check that the mechanical installation is correct, sturdy and complies with environmental and cooling requirements.
- Check that the seals are intact and correctly positioned in their seats.
- Check that the cable glands and screws are properly tightened.

- Check that the device is completely closed and that live parts are not accessible.

**WARNING**

It is strongly recommended to check the insulation of the load to the ground before supplying power to the device. In fact, if the insulation to the ground were to be compromised, when power is supplied, irreversible damage to the device could occur

8.2. Powering

**DANGER**


Before supplying power to the device, make sure you have read, understood and implemented all the safety, mechanical, and electrical installation instructions.

At the end, it shall be possible to:

- power up the device.
- verify the correct switching on and the absence of alarm messages.
- perform programming.
- start the motor.

9. Use and programming

9.1. Keyboard and display

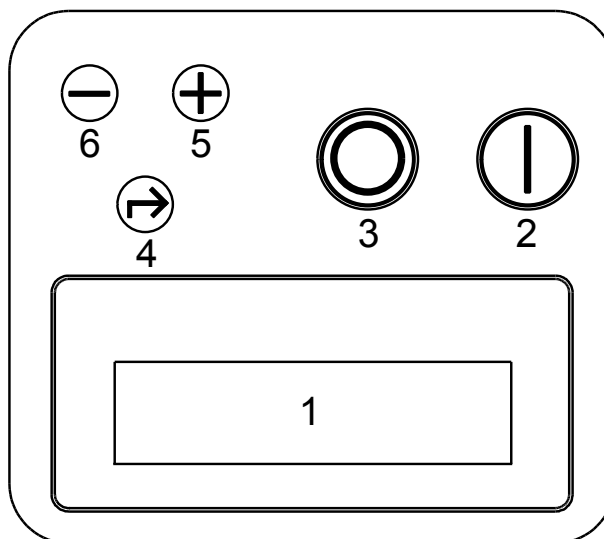**WARNING**

Protect the keyboard and display from shocks. Press with fingers only on the keys and never on the display. Excessive pressure on the display and surrounding area can lead to damage.

1. DISPLAY
2. START: motor start
3. STOP: motor stop / alarm reset / exit the menu
4. ENTER: access the menu / edit parameters / confirm parameters
5. +: parameter scrolling / parameter editing
6. -: parameter scrolling / parameter editing

Keep the START / STOP key pressed down for at least 5 seconds to activate the START/STOP key lock function through which it is only possible to scroll and view the operating parameters, using the + and - keys; this does not allow starting or stopping the motor. Press the START/STOP button again for at least 5 seconds to deactivate the lock.

Keep the + and - keys pressed for at least 5 seconds to reverse the display.



NOTE

A confirmation acoustic signal helps the user to operate the device and provides a quick indication in case of an alarm.

9.2. Control via App

The device can be controlled using a smartphone or tablet equipped with BTLE connectivity and with the App Nastec NOW installed. The App is available for Android and iOS and may be downloaded, free of charge, from the respective online stores.

Android



iOS



Through the application it is possible to:

- Monitor multiple operating parameters simultaneously.
- Obtain energy consumption statistics and check alarm history.
- Run reports with the possibility of adding notes, images and send them by e-mail or store them in the digital archive.
- Create schedules, save them in the archive, copy them to other devices, and share them among multiple users
- Control a device remotely, via Wi-Fi or GSM, using a smartphone placed nearby as a modem.
- Access manuals and additional technical documentation.
- Receive online help on parameters and alarms.

9.3. Initial set-up

The first time the device is switched on, the initial set-up is entered directly, through which it is possible to perform a quick and complete programming of the device in relation to the pump and the system in which it is installed. Failure to complete the initial set-up makes it impossible to use the device. In any case, it is possible to repeat the initial set-up at any time, for example if you decide to install the device in a new system.

The device suggests default values for each parameter. If you wish to modify the basic setting, simply press the ENTER key, wait for the parameter to start flashing and use the scroll keys. Press ENTER again to save the selected value, which therefore stops flashing.

During the initial set-up the device control mode is automatically set to P018 Control mode = MPPT.

A detailed description of the different parameters encountered during the initial set-up is provided here below.

Parameter	Default	Description
P001 Language XXXXXXX	English	Language of communication with the user
P097 Open c. volt. PV V = XXX [VDC]		Open circuit voltage of the string of photovoltaic panels.
P083 Unit XXXXX	bar	Units of measurement [bar, %, ft, in, cm, m, K, F, C, gpm, l / min, m ³ / h, atm, psi].
P102 Motor type XXXXXX	Threephase asyn.	Type of motor connected and control used: • Singlephase PSC: control for single-phase 2-wire PSC motors. • Threephase asyn.: control for three-phase asynchronous motors. • Synchronous PM: control for permanent magnet synchronous motors. • Scalar: V / f scalar control.

Parameter	Default	Description
P017 Rated motor Amp. $I = XX.X$ [A]		Motor rated current according to its data plate increased by 5%. The voltage drop across the inverter may result in a current absorption greater than the motor rated current indicated on the data plate. It is necessary to check with the motor manufacturer that this overcurrent can be tolerated.
P005 Rated motor freq $f = XXX$ [Hz]	50	Rated frequency of the motor according to its data plate.
Motor tuning ENT to access		If the device is "FOC-ready", motor calibration must be carried out before commissioning.  WARNING Carefully read the chapter dedicated to the FOC motor control.
Motor test START/STOP		By using START / STOP it is possible to carry out a running test of the pump at the desired working frequency.  WARNING Check that the pump can be started without causing damage to it or to the system.
P044 Rotation sense ---> / <---	--->	Running direction of the motor. Should the motor run in the wrong direction, it is possible to reverse the running direction without having to change the phase sequence in the connection.
BTLE connection ON / OFF	ON	Enable BTLE communication
P043 Autorestart ON/OFF	OFF	By selecting ON, when the mains power is restored after a power failure, the device will return to the same state it was in before the power failure: this means that if the pump was working, it will start working again
INITIAL SETUP COMPLETED		This message informs the user that the initial set-up procedure has been successfully completed. The parameters set during this procedure are saved in the device. These values can be subsequently modified from the appropriate menus.

9.4. FOC motor control

9.4.1. Introduction

The benefits provided by the FOC (Field Oriented Control) motor control implemented in the "FOC-ready" inverters over a traditional control are as follows:

- Ideal control of the current at each operating point.
- Quick and accurate speed adjustment.
- Lower energy consumption.
- Reduction of torque fluctuations (vibrations) for smoother and more regular operation throughout the frequency range and less system noise.
- Less mechanical stress on the motor, pump and hydraulic system.

The FOC control of "FOC-ready" devices can be used with:

- Three-phase asynchronous motors
- Permanent magnet three-phase synchronous motors

The control is "sensorless" and therefore does not require the use of any sensor.

9.4.2. FOC control calibration

To enable the device to perform the FOC check it is necessary:

1. Carry out all system wiring. Connect the load (pump) to the inverter using a cable of suitable length, and any dV / dt or sine filter.
2. Power up the system and follow the initial set-up procedure specifying:
 - a. Motor type: three-phase asynchronous or permanent magnet synchronous motor.
 - b. Rated voltage of the motor according to its data plate.
 - c. Rated frequency of the motor according to its data plate.
 - d. Rated current of the motor increased by 5% compared to the value on the data plate.
3. Carry out the Auto tuning process to allow the inverter to learn the electrical information of the load connected to it (motor, cable and filter - if any). The calibration process can take up to 1 minute.
4. Wait for the calibration process to be completed successfully.

**NOTE**

The calibration process can take up to 1 minute. Wait until it is completed.

**NOTE**

The calibration process must be performed in the final electrical configuration of the system, that is after the motor, the cable and any filter have been fitted.

If a change is made to the motor, cable or filter once they have been fitted, the calibration process must be repeated.

**CAUTION**

Incorrect setting of motor voltage, frequency and rated current leads to incorrect results in the calibration process and consequently to motor malfunction.

**WARNING**

Setting the rated current of the motor too high compared to the value on the data plate can seriously damage both the motor and the inverter. Setting the rated current of the motor too high compared to the value on the data plate can seriously damage both the motor and the inverter.

**WARNING**

During calibration the motor coils are heated by the test current. If the motor is self-ventilated, the absence of motor rotation does not allow the heat to be dispersed by force. The motor should therefore be allowed to cool between one calibration and the next.

**DANGER**

During the calibration process, the motor remains stationary but is powered for the entire calibration period. Disconnect the device from the power supply before any intervention on the equipment and on the loads connected to it.

If the calibration process is not successful, check that:

- The connections between the inverter and the load (including any interposed motor filters).
- The set rated voltage, frequency and current values.

**NOTE**

The motor cannot be started until the calibration process has been completed.

**NOTE**

If the calibration process cannot be completed, it is possible to manually enter the parameters or stator resistance (R_s) and stator inductance (L_s) in the motor parameters menu (default password 002). These data can be provided by the motor manufacturer or obtained through measurements. If you do not have these data and the self-calibration process is not successful, contact the technical support service.

9.4.3. Adjusting the FOC control

The FOC control algorithm checks current (torque) and speed with defined response dynamics.

The FOC dynamics is set by default to a value sufficient to guarantee accurate and oscillation-free control in most applications.

In some cases, however, it may be necessary to increase (in case of frequency oscillations) or to lower (in case of overcurrent or igbt trip alarms) the "FOC dynamic" setting in the motor parameters menu (default password 002) according to the following table:

Configuration	FOC dynamics
Motor cables shorter than 100 m and no filter between inverter and motor.	200
Motor cables shorter than 100 m and a dV/dt filter between the inverter and the motor.	150
Motor cables longer than 100 m and a dV/dt filter between the inverter and the motor.	100
Presence of a sine filter between the inverter and the motor.	50 or 40 or less

**WARNING**

The incorrect configuration of the FOC dynamics may cause:

- Speed oscillations if the FOC dynamics is too slow.
- Overcurrent or igbt trip alarms if the FOC dynamics is too fast.

Intervene promptly by appropriately adjusting the "FOC Dynamics" parameter if the conditions listed above are present. Failure to act may lead to damages to the inverter, the motor and the system.

9.5. Initial display

When the device is switched on, the control firmware version (LCD = X.XX) and the power firmware version (INV = X.XX) are communicated to the user.

Subsequently, or as soon as the first initial set-up has been completed, the initial view opens.

The first line in the display shows the status of the device:

- **Inv: ON XX.X Hz** if the device is enabled for the control and the motor is running at the indicated frequency.
- **Inv: ON Mot: OFF** if the device is enabled for motor control and the motor is not running (ex: the pump has been stopped because it has reached its minimum stop frequency under constant pressure operation).
- **Inv: OFF Mot: OFF** if the device is not enabled for motor control, which is therefore stopped.

When the COMBO function is activated, the address of the corresponding device appears next to the item **Inv**.

9.5.1. Operating parameters

Parameter	Description
p =XX.X [bar]	p is the measured pressure value. By pressing the ENTER key, the set pressure value appears<XXX.X>.
f = XXX.X [Hz]	Parameter f represents the frequency (Hz) with which the inverter is powering the motor. If the control mode is set on "fixed frequency", it is possible to make a real-time variation of the working frequency by means of the ENTER key while the symbol <i>set</i> appears on the display. Press the ENTER key again to exit this mode, as evidenced by the disappearance of the symbol <i>set</i> ; this also saves the new working frequency.
V _{in} =XXX [V] / I=XX.X [A]	Parameter V represents the power supply voltage. This appears only while the motor is in the OFF state. In the ON state, parameter I is displayed instead of the supply voltage, which represents the intensity of current (A) absorbed by the motor.
cosphi = X.XX	The cosphi parameter represents the cosine of the phi phase displacement angle between voltage and current. It is also called power factor.
P = XXXXX [W]	Provides an estimate of the active electrical power absorbed by the motor.
STATUS: NORMAL	In the absence of alarms, the STATUS is NORMAL. Otherwise, the alarm message flashes and an intermittent acoustic signal is emitted which can be silenced by pressing the STOP key. Press th ENTER key to access the Diagnostics menu. To return to the initial display, simply press the ENTER key.
MENU' ENT to access	Press the ENTER key to access the menu display.

9.5.2. Diagnostics

Parameter	Description
Inverter life XXXXX h : XX m	Inverter life
Motor life XXXXX h : XX m	Motor life
%f 25 50 75 100 %h XX XX XX XX	Operation statistics based on frequency and hours.
ALL. XXXXXXXXXXXXX XXXXXXX h : XX m	Alarm log (up to 8) in relation to the life of the inverter

9.6. Menu

To access the Menu section, press the ENTER key on the MENU' / ENT to access screen.

To exit the Menu section, press the STOP key several times until you go back to the Initial View.



NOTE

Stop the motor before entering the Menu section.

Access to the menus is password-protected at two levels:

- **Installer level:** Allows editing the parameters related to pump operation in the hydraulic system on which it is installed. **Password 1, default 001.**
- **Advanced level:** Allows editing of critical parameters that can affect the life of the device, the pump, and the system if they are set incorrectly. **Password 2, default 002.**

Within each menu, it is possible to change the relative access password.



NOTE

When an incorrect password is entered to access both the installer and advanced level, the parameters can only be displayed but not edited.

In case of loss of the password, contact the technical support service to obtain the universal password.

Menu	Description	Level	Default password
Control. param.	Menu of parameters for controlling the pump in the hydraulic system in which it is installed.	Installer	001
Motor parameters	Menu of parameters for motor control	Advanced	002
IN/OUT paramet.	Menu of parameters for analog and digital inputs and outputs	Installer	001
Connect. param.	Menu of parameters for connectivity and external communication.	Installer	001
Change init.set	Initial configuration menu.	Advanced	002



CAUTION

Access to this menu Change init.set is recommended only if you intend to completely reprogram the device starting from the factory settings.


The changes to the parameters made from this menu become effective only once the initial configuration has been completed, i.e. when Change init.set / COMPLETED appears.

All other device parameters will be reset to factory settings.

9.7. Control parameters

Parameter	Default	Description	1	2	3	4	5	6
P018 Control mode 1. Constant value 2. Fix speed 3. Const.value 2set 4. Fix speed 2 val. 5. External speed 6. MPPT	MPPT	The following control modes can be selected: 1. Constant value: the device varies the speed of the pump in such a way as to keep the set value constant regardless of water consumption. 2. Fix speed: the device powers the pump at the set frequency. 3. Const.value 2set: two desired values can be selected by opening or closing digital input 2. 4. Fix speed 2 val.: two desired frequency values can be selected by opening or closing digital input 2. 5. External speed: it is possible to control the motor frequency through an analog signal connected to analog input 4. 6. MPPT: the device varies the speed of the pump to maximize the power obtained from the photovoltaic panels.	x	x	x	x	x	x
P112 AUX control mode XXXXXXXX	MPPT	Operate on digital input 4 to switch from the main control mode to the auxiliary control mode and vice versa.	x	x	x	x	x	x
P061 Max alarm value p = XX.X [bar]	10 bar	Value that can be reached in the system beyond which, even in constant frequency operating mode, the pump is stopped and an alarm signal is emitted. The pump is restarted only after the measured value has dropped below the maximum alarm value for more than 5 seconds.	x	x	x	x	x	x

VASCO Solar - Variable Speed Controller

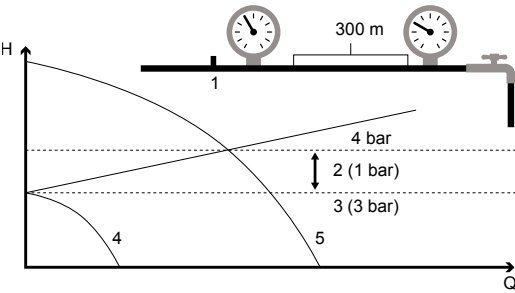Parameter	Default	Description	1	2	3	4	5	6
P016 Min alarm value p = XX.X [bar]	0	Minimum value that can be reached in the system below which, even in constant frequency operating mode, the pump is stopped and an alarm signal is emitted. The pump is restarted only after the measured value has risen above the minimum alarm value for more than 5 seconds.	x	x	x	x	x	x
P097 Open c. volt. PV V = XXX [VDC]		Open circuit voltage of the string of photovoltaic panels. Leaving the default value it is calculated automatically based on the input voltage measured before starting the motor.						x
P094 MPPT: volt. gap dV = XXX.X [V]		Voltage range used in the MPPT control algorithm.						x
P095 MPPT: time gap dt = XX.X [s]	1 s	Time interval used in the MPPT control algorithm.						x
P096 MPPT: freq. gap df = XXX.X [Hz]		Frequency range used in the MPPT control algorithm.						x
P115 Pipe Fill Ramp XXX [s]	= P009 Ramp up time	Ramp time to follow after a start if the measured value is lower than the minimum alarm value. The piping filling ramp expires after the set time or if the measured value reaches the set value. In COMBO mode, only one unit is enabled to operate as long as the filling ramp is active.	x		x			
P047 Ext.set enabling ON/OFF	OFF	Enabling the setting of the set value via analog input 3.	x		x			
P002 Set value p = XXX.X [bar]	3 bar	Value that you want to keep constant. In MPPT control mode, the pump automatically limits the frequency to keep the pressure read by the pressure sensor (if installed) constant.	x					x
P091 Compensation p = XXX.X [bar]	0	Compensation at the maximum frequency. The sign can be reversed via the green key.  1: sensor; 2: P091 Compensation ; 3: P002 Set value ; 4: P022 Min motor freq.; 5: P039 Max motor freq. In the case of a group of pumps in COMBO mode, the compensation must be referred to each pump.	x					
P013 Set value 2 p = XXX.X [bar]	3 bar	Value that you want to keep constant.			x			
P092 Compensat. set 2 p = XX.X [bar]	0	Compensation at the maximum frequency. The sign can be reversed via the green key.			x			
P059 Value set update t = XX [s]	5 s	Time interval for updating the set value according to the compensation.	x		x			
P006 Operating freq. f = XXX [Hz]	= P039 Max motor freq.	Frequency used by the device to power the motor.		x		x		
P040 Operating freq.2 f = XXX [Hz]	= P039 Max motor freq.	Frequency used by the device to power the motor.				x		
P021 Freq.min.control fmin = XXX [Hz]	= P039 Max motor freq.	Minimum frequency below which the pump must try to stop following the control ramp (P085 Control ramp).	x		x			


VASCO Solar - VARIABLE Speed Controller

Parameter	Default	Description	1	2	3	4	5	6
P060 Stop delay t = XX [s]	5 s	Delay during which an attempt is made to stop the pump below the minimum control frequency (P021 Freq.min.control).	x		x			
P085 Control ramp t = XX [s]	40 s	Time in which the device decreases the motor power frequency from the minimum control frequency (P021 Freq.min.control) to the minimum motor frequency (P022 Min motor freq.). If during this time the measured value falls below P002 Set value - P087 Delta control, the device restarts the motor. If not, the device will stop the motor completely following the control ramp (P085 Control ramp).	x		x			
P003 Delta start p = XXX.X [bar]	0.5 bar	This parameter communicates by how much the measured value must fall from the set value for the previously stopped pump to be restarted.	x		x			
P087 Delta control p = XXX.X [bar]	0.1 bar (2 psi)	This parameter communicates by how much the measured value must fall in relation to the set value so that the pump, during shutdown in control ramp, is restarted. 1: P022 Min motor freq.; 2: P021 Freq.min.control ; 3: P087 Delta control; 4: P002 Set value ; 5: P060 Stop delay; 6: P085 Control ramp	x		x			
P058 Delta stop p = XX.X [bar]	0.5 bar (8 psi)	This parameter represents the increment of the measured value with respect to the set value that must be exceeded so that a forced shutdown of the pump according to the stop ramp can occur.	x		x			
P015 Ki XXX	50	Integral coefficient used in constant value adjustment.	x		x			x
P014 Kp XXX	5	Proportional coefficient used in constant value adjustment.	x		x			x
P049 COMBO ON/OFF	OFF	Enable the function P049 COMBO for the combined operation of several pumps in parallel. Read the dedicated chapter.	x		x			x
P062 Address COMBO XX	01	Device address when in COMBO mode: • 0: master • 01 to 07: slave	x		x			x
P050 Alternance ON/OFF	ON	Enabling the alternation between units in COMBO and D.O.L. The order of priority of operation is alternated based on the previous start-up of each pump in order to obtain an almost uniform wear of the pumps.	x		x			x
P101 Altern. period t = XX [h]	0	Maximum difference in operating hours between multiple devices in the unit. 0 means 5 minutes.	x		x			x
P055 COMBO synchrony ON/OFF	OFF	Through this parameter it is possible to activate the synchronous operation of the pumps in COMBO. Read the dedicated chapter. However, it is necessary to lower parameter P021 Freq.min.control accordingly.	x		x			
P057 Start delay AUX t = XX [s]	00	Time delay with which the pumps in a group start up after the variable speed pump has reached the maximum motor frequency and the measured value has fallen below the difference P002 Set value - P087 Delta control.	x		x			x
P137 Max COMBO XX	8	Maximum number of COMBO units that can be active at the same time.	x		x			

Parameter	Default	Description	1	2	3	4	5	6
P056 PI control Direct/Reverse	Direct	PI control mode: - Direct: as the pump speed increases, the measured value increases. - Reverse: as the pump speed increases, the measured value decreases.	x		x			
P089 Periodic autorun t = XX [h]	00	Periodic pump start-up after X hours of inactivity. The value 0 disables the function.	x	x	x	x	x	
P131 Dry run paramet. XXXXXXXX		Reference parameter for detecting dry running. It is possible to choose between: - Cosphi - Current - Pressure AN1 - Pressure AN2 Read the dedicated chapter for more information.	x	x	x	x	x	
P020 Dry run thresh. X.XX		Parameter value P131 Dry run paramet. below which the pump is stopped and the water shortage alarm is triggered. The parameter can take on a variable value between 0 and 1 and takes on the following meanings based on the parameter setting P131 Dry run paramet. : - Cosphi : motor cosphi value - Current : percentage of the parameter P017 Rated motor Amp. - Pressure AN1 : percentage of the parameter P004 F.scale sensor - Pressure AN2 : percentage of the parameter P146 F.scale sensor AN2 Read the dedicated chapter for more information.	x	x	x	x	x	
P132 Dry run delay t = XXX [s]	5 s	Delay time in the intervention of the dry running protection.	x	x	x	x	x	x
P088 Restarts delay t = XX [min]	10 min	Time base that establishes the delay of attempts to restart the pump following a no-water alarm. With each attempt, the delay time is doubled. The maximum number of attempts is 5. If the parameter is set to 0, the device will directly produce the alarm A04 DRY RUN THRESH. without making any attempt to restart.	x	x	x	x	x	x
Change PASSWORD1 Press ENT		By pressing the ENT key it is possible to change the installer level password (level 1) (default 001).	x	x	x	x	x	x

9.8. Motor parameters

Parameter	Default	Description
P102 Motor type XXXXXXXX	Threephase asyn.	Type of motor connected and control used: - Threephase asyn.: control for three-phase asynchronous motors. - Synchronous PM: control for permanent magnet synchronous motors. - Singlephase PSC: control for single-phase 2-wire PSC motors.
P007 Rated motor Volt V = XXX [V]		Rated voltage of the motor according to its data plate. The average voltage drop across the inverter is 20 to 30V RMS depending on the load conditions.
P008 Voltage boost V = XX.X [%]		Motor starting voltage increase to favor the starting torque. Contact the motor manufacturer for more information.
P017 Rated motor Amp. I = XX.X [A]		Motor rated current according to its data plate increased by 5%. The voltage drop across the inverter may result in a current absorption greater than the motor rated current indicated on the data plate. It is necessary to check with the motor manufacturer that this overcurrent can be tolerated.
P005 Rated motor freq f = XXX [Hz]	50 Hz (60 Hz)	Rated frequency of the motor according to its data plate.
P039 Max motor freq. f = XXX [Hz]	50 Hz (60 Hz)	Maximum frequency intended to power the motor. Reducing the maximum motor frequency reduces the maximum current consumption.

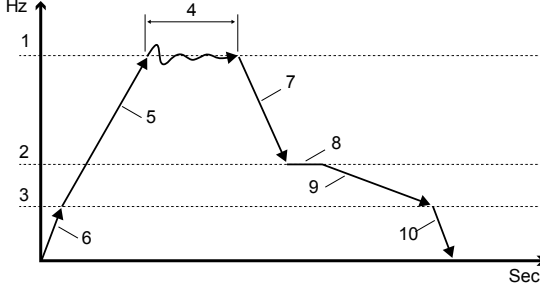Parameter	Default	Description
P022 Min motor freq. $f = \text{XXX} [\text{Hz}]$	30 Hz (35 Hz)	Minimum motor frequency. When using submersible pumps with Kingsbury type thrust system, it is recommended not to go below 1750 rpm so as not to compromise the thrust system.
P009 Ramp up time $t = \text{XX} [\text{sec}]$		Motor start ramp from minimum frequency (P022 Min motor freq.) to maximum frequency (P039 Max motor freq.). Slower ramps cause less strain on the motor and pump and therefore promote longer life. On the other hand, response times are longer. Excessively fast start-up ramps may lead to an overload in the inverter.
P010 Ramp down time $t = \text{XX} [\text{sec}]$		Motor stop ramp from maximum frequency (P039 Max motor freq.) to minimum frequency (P022 Min motor freq.). Slower ramps cause less strain on the motor and pump and therefore promote longer life. On the other hand, response times are longer. Excessively fast stop ramps may lead to an overvoltage in the inverter due to the regenerative effect.
P012 Ramp f min mot. $t = \text{XX} [\text{sec}]$		Time in which the motor reaches the minimum frequency from standstill (P022 Min motor freq.) and vice versa.  1: P039 Max motor freq.; 2: P021 Freq.min.control ; 3: P022 Min motor freq.; 4: P056 PI control; 5: P009 Ramp up time; 6: P012 Ramp f min mot. ; 7: P010 Ramp down time; 8: P060 Stop delay; 9: P085 Control ramp; 10: P012 Ramp f min mot.
P124 Output filter	None	Type of output filter possibly installed between the inverter and the motor: • None : no filter installed • dV/dt : dV/dt filter • Sin : sine filter
P011 PWM $f = \text{XX} [\text{kHz}]$		Inverter modulation frequency. It is possible to choose between 2.5, 4, 6, 8, 10 kHz depending on the inverter model. Higher values correspond to a more faithful reconstruction of the sine wave. When using very long motor cables (>20 m), the appropriate output filters, available upon request, should be interposed between the inverter and the motor and the correct value of the PWM parameter according to the type of filter and the length of the cable should be set. This reduces the probability of voltage peaks at the motor input while safeguarding the winding insulation. Lower values reduce the heating of the inverter.
P086 V/f lin.-> quad. $\text{XXX} \%$	80%	This parameter allows changing the V/f characteristic with which the device supplies the motor. The linear characteristic corresponds to a constant torque characteristic with varying revolutions. The quadratic characteristic corresponds to a variable torque characteristic and is generally suitable for use with centrifugal pumps. The torque characteristic must be chosen ensuring smooth operation, reduced energy consumption and lower heating and motor noise. With single-phase motors, we recommend setting linear V/f (0%).
P044 Rotation sense ----> / <----	---->	Running direction of the motor. Should the motor run in the wrong direction, it is possible to reverse the running direction without having to change the phase sequence in the connection.  CAUTION If there is more than one pump in a COMBO unit, it is best to use the same phase sequence when connecting the motors and to set the same running direction.
Motor tuning ENT to access		If the device is "FOC-ready", motor calibration must be carried out before commissioning.  WARNING Carefully read the chapter dedicated to the FOC motor control.
P103 Motor resistance $R_s = \text{XXX.XX} [\text{Ohm}]$		Manual setting of the stator resistance.

Parameter	Default	Description
P104 Motor inductance Ls=XXX.XX [mH]		Manual setting of the stator inductance.
P105 FOC dynamics XXX	200	Setting of the control dynamic of the FOC algorithm.
P106 FOC speed XXX	5	Setting of the control speed of the FOC algorithm.
P151 Emergency mode XXXXXXXX	OFF	Activating emergency mode and selecting the level: • OFF: unarmed emergency mode • Level 1: armed emergency mode according to level 1 • Level 2: armed emergency mode according to level 2  WARNING Read the dedicated chapter carefully, fully understanding the risks and implications.
P152 Emergency freq. f = XX [kHz]		Emergency frequency at which the motor is operated in the event of an emergency. The value can be set between P022 Min motor freq. And P005 Rated motor freq.
P043 Autorestart ON/OFF	ON	By selecting ON, when the mains power is restored after a power failure, the device will return to the same state it was in before the power failure: this means that if the pump was working, it will start working again
Change PASSWORD2 Press ENT		By pressing the ENT key it is possible to change the advanced level password (level 2) (default 002).

9.9. IN / OUT parameters

Parameter	Default	Description
P083 Unit XXXXX	bar	Units of measurement [bar, %, ft, in, cm, m, K, F, C, gpm, l / min, m3 / h, atm, psi].
P004 F.scale sensor p = XXX.X [bar]	16 bar (250 psi)	Full scale of the sensor.
P084 Min.value sensor p = XXX.X [bar]	0	Minimum sensor value.
P019 Offset AN1 XX.X [%]	20%	Zero correction for analog input 1 (4-20 mA). (20 mA x 20% = 4 mA).
P080 Offset AN2 XX.X [%]	20%	Zero correction for analog input 2 (4-20 mA). (20 mA x 20% = 4 mA).
P081 Offset AN3 XX.X [%]	20%	Zero correction for analog input 3. 4-20 mA : 20 mA x 20% = 4 mA 0-10 V : 10V x 0% = 0 V
P082 Offset AN4 XX.X [%]	0%	Zero correction for analog input 4. 4-20 mA: 20 mA x 20% = 4 mA 0-10 V : 10V x 0% = 0 V
P090 AN1 AN2 function XXXXXXXX	Independ-ent	Operating logic of analog inputs AN1, AN2: • Independent. The active sensor is relative to analog input 1, while the sensor connected to analog input 2 serves as an auxiliary in case of failure of the sensor or of analog input 1. • Selectable. The active sensor may be selected via digital input 3. • Difference 1-2. The digital difference in absolute value is performed between the measurements of analog input 1 and analog input 2. • Higher value. The maximum value between the measurements of the two sensors is considered. • Lower value. The minimum value between the measurements of the two sensors is considered.
P063 Digit. input IN1 N.O./N.C.	N.O.	If N.O. (Normally Open) is selected, the device will continue to operate the motor if digital input 1 is open. Conversely, it will stop the motor if digital input 1 is closed. If N.C. (Normally Closed) is selected, the device will continue to operate the motor if digital input 1 is closed. Conversely, it will stop the motor if digital input 1 is open.

VASCO Solar - VARIABLE Speed COntroller

Parameter	Default	Description
P064 Digit. input IN2 N.O./N.C.	N.O.	If N.O.(Normally Open) is selected, the device will continue to operate the motor if digital input 2 is open. Conversely, it will stop the motor if digital input 2 is closed. If N.C. (Normally Closed) is selected, the device will continue to operate the motor if digital input 2 is closed. Conversely, it will stop the motor if digital input 2 is open. Digital input 2 is also used to select set value 1 or set value 2 in the control mode Const.value 2set or to select working frequency 1 or 2 in the control mode Fix speed 2 val.. In the presence of the flow switch, it is used for operation via flow switch.
P065 Digit. input IN3 N.O./N.C.	N.O.	If N.O.(Normally Open) is selected, the device will continue to operate the motor if digital input 3 is open. Conversely, it will stop the motor if digital input 3 is closed. If N.C. (Normally Closed) is selected, the device will continue to operate the motor if digital input 3 is closed. Conversely, it will stop the motor if digital input 3 is open. Digital input 3 is also used to select sensor 1 or sensor 2 when the parameter P090 AN1 AN2 function is set to Selectable.
P066 Digit. input IN4 N.O./N.C.	N.O.	If N.O.(Normally Open) is selected, the device will continue to operate the motor if digital input 4 is open. Conversely, it will stop the motor if digital input 4 is closed. If N.C.(Normally Closed) is selected, the device will continue to operate the motor if digital input 4 is closed. Conversely, it will stop the motor if digital input 4 is open. Digital input 4 is also used to select the main or auxiliary control mode in case they are different. Digital input 4 also serves as alarm reset.
P071 Man reset In Dig 1	OFF	Enabling or disabling the manual reset of the digital input.
P072 Man reset In Dig 2	OFF	Enabling or disabling the manual reset of the digital input.
P073 Man reset In Dig 3	OFF	Enabling or disabling the manual reset of the digital input.
P074 Man reset In Dig 4	OFF	Enabling or disabling the manual reset of the digital input.
P079 Dig.In.2/3 delay t = XX [s]	1	Delay of digital inputs 2 and 3. Digital inputs 1 and 4 have a fixed delay of 1 second. By setting a value greater than 30 seconds, digital input 2 serves as the input for the flow switch.
P138 Delay IN1 ON t = XXX [s]	1	Delay in activating the digital input 1.
P139 Delay IN1 OFF t = XXX [s]	1	Delay in deactivating the digital input 1.
P140 Delay IN2 ON t = XXX [s]	1	Delay in activating the digital input 2.
P141 Delay IN2 OFF t = XXX [s]	1	Delay in deactivating the digital input 2. By setting a value greater than 30 seconds, digital input 2 serves as the input for the flow switch.
P142 Delay IN3 ON t = XXX [s]	1	Delay in activating the digital input 3.
P143 Delay IN3 OFF t = XXX [s]	1	Delay in deactivating the digital input 3.
P144 Delay IN4 ON t = XXX [s]	1	Delay in activating the digital input 4.
P145 Delay IN4 OFF t = XXX [s]	1	Delay in deactivating the digital input 4.
P107 Flow Measure XXXXXXXXXX	None	Flow measurement mode: • None: the flow rate is not measured. • Freq. Proport.: the flow rate is calculated proportionally to the frequency of rotation of the pump. • AN2 4-20mA: the flow rate is read through analog input 2 (4-20 ma). • AN3 pulse: The flow rate is read via analogue input 3 (0-10) with a pulse signal.
P108 Rated Flow XXX.X [m3/h]	1	If parameter P107 Flow Measure is set to Freq. Proport., the nominal flow rate corresponds to the pump flow rate at nominal speed. If parameter P107 Flow Measure is set to AN2 4-20mA, the nominal flow rate corresponds to the full scale of the flow meter.
P108 Pulse XXXX.X [l/pulse]		If parameter P107 Flow Measure is set to AN3 pulse, it is necessary to specify how many liters correspond to each pulse sent by the flow meter.

Parameter	Default	Description
P109 Min stop flow XXX.X [m3/h]	0	If the measured flow remains below parameter P109 Min stop flow for more than 60 seconds, the pump will be stopped. The device will attempt to restart the pump every XX minutes based on the value specified in parameter P088 Restarts delay.
P110 Solarimeter F.S. XXXX [W/m2]	0	The 4-20 mA solarimeter full scale connected to analog input 2. A value of 0 means that the measurement is disabled.
P111 Min. Stop. Rad. XXXX [W/m2]	0	If the measured irradiation remains below parameter P111 Min. Stop. Rad. for more than 60 seconds, the pump will be stopped. The device will attempt to restart the pump every XX minutes based on the value specified in parameter P088 Restarts delay.
P122 Min. Start. Rad. XXXX [W/m2]	0	In COMBO Solar operating mode with solar meter connected, it specifies the additional irradiation value to the irradiation specified by the parameter P111 Min. Stop. Rad. necessary to start another pump in sequence. It is advisable to set this parameter equal to the irradiation value necessary for the operation of a pump in the group at maximum power increased by 10%.
Change PASSWORD1 Press ENT		By pressing the ENT key it is possible to change the installer level password (level 1) (default 001).

9.10. Connectivity parameters

Parameter	Default	Description
P001 Language XXXXXXXX	English	Language of communication with the user
BTLE connection ON / OFF	ON	Enable BTLE communication
P125 Communication	MODBUS	• MODBUS • BACNET
P126 Max master	1	Maximum number of master units (only for BACNET) from 1 to 127.
P098 Address RS-485 XXX	1	Address from 1 to 247
P099 Baudrate XXXXX	9600	Baudrate from 1200 bps to 57600 bps
P100 Data format XXXXX	N81	Data format: N81, N82, E81, O81
P024 EEPROM writing ON/OFF	OFF	Setting the writing mode of the parameters transmitted via: ON: the datum is saved in EEPROM OFF: the datum is not saved in EEPROM  WARNING It is recommended to save in EEPROM only if strictly necessary. An excessive number of saves, over 100,000, can result in irreversible damage to the EEPROM
Change PASSWORD1 Press ENT		By pressing the ENT key it is possible to change the installer level password (level 1) (default 001).

9.11. Dry run protection

The device offers a digital protection system against dry running avoiding the use of additional probes.

The protection system is based on reading a reference parameter, defined by the parameter P131 Dry run paramet., and on the comparison between the value read and the set protection threshold, defined by the parameter P020 Dry run thresh..

In the menu Control. param., the parameter P131 Dry run paramet. allows you to choose between:

- Cosphi
- Current
- Pressure AN1
- Pressure AN2

The default value of the parameter P131 Dry run paramet. it depends on the parameter setting P018 Control mode And P102 Motor type according to table.

The parameter P020 Dry run thresh. establishes the threshold below which the pump is stopped within 15 seconds and the water shortage alarm is triggered.



WARNING

When the warning W26 NO WATER appears, the device will automatically restart the load after a time equal to the value set in the parameter P088 Restarts delay multiplied by the number of attempts made. At the end of the fifth attempt, the device will definitively stop the load producing the alarm A04 DRY RUN THRESH.. The alarm must be reset manually.

The parameter can take on a variable value between 0 and 1 and takes on the following meanings based on the parameter setting P131 Dry run paramet. :

- Cosphi : motor cosphi value
- Current : percentage of the parameter P017 Rated motor Amp.
- Pressure AN1 : percentage of the parameter P004 F.scale sensor
- Pressure AN2 : percentage of the parameter P146 F.scale sensor AN2

When the parameter is set to 0, the water shortage protection is disabled.



NOTE

A handy method to set the correct parameter value P020 Dry run thresh. when the parameter P131 Dry run paramet. is set to Cosphi or Current consists of:

1. Start the pump at a fixed frequency equal to the maximum frequency (JOG mode)
2. Checking in advance that the system is able to support the pressure, completely close the delivery valve closest to the pump.



WARNING

It is recommended to carefully check that the system is able to withstand pressure with a closed flow without jeopardizing the safety of the system and people. Do not extend this condition longer than 10 seconds to avoid damage to the pump and system

3. Read the cosphi or current value indicated on the display or on the App monitor.
4. Set the parameter P020 Dry run thresh. to a value 10% lower than the one read.*

For example, if the current value read is 4.5 A and the rated current of the motor is 9 A, the parameter P020 Dry run thresh. it will be set to 0.45

Alternatively, if the cosphi value read is 0.7, the parameter P020 Dry run thresh. 0.63 will be set

* In the presence of motors Singlephase 3 wire CSCR And Singlephase 3 wire CSIR the parameter P020 Dry run thresh. refers to the running phase current.



WARNING

It is the installer's responsibility to verify at the end of the installation that the device is always able to detect dry running and stop the pump in time before it gets damaged.

If you are unsure of the programming necessary for the digital dry-running protection to be effective, install suitable probes.

**NOTE**

To protect the pump from dry running using a pressure transducer placed in suction to the pump, it is necessary to set the parameter P131 Dry run paramet. A Pressure AN2.

In this case, you can set the following additional parameters:

Menu	Parameter	Description
IN/OUT paramet.	P146 F.scale sensor AN2	Full scale of the sensor.
IN/OUT paramet.	P147 Min.value sensor AN2	Minimum sensor value.
Control. param.	P148 Dry run th. AN2	Pressure value above which the device restarts the pump. The parameter can be set to a value that varies between 0 and 1 as a percentage of the parameter. P146 F.scale sensor AN2.
Control. param.	P149 DR rest.delay-AN2	Delay in seconds before restarting the pump.
Control. param.	P150 DR man reset AN2	• OFF : the pump is automatically restarted when the pressure value exceeds the set value. • ON : a manual reset is required to restart the pump.

9.12. Pump stop under low irradiation conditions

Centrifugal pumps develop the head in relation to their running speed (frequency). If irradiation is too weak, the pump may continue to operate without generating flow since the developed head is lower than the minimum head necessary to produce the flow.

Since the water flow is responsible for cooling the motor (submerged) and the pump, the persistence of this condition would lead to dangerous overheating of the motor (submerged) and of the pump.

9.12.1. Minimum frequency stop

Parameter P022 Min motor freq. can be set from the menu Motor parameters at a sufficiently high value to ensure that the pump stops below a certain frequency, according to the formula:

$$f_{\min} = f_{\max} \cdot \sqrt{\frac{H_{\min}}{H_{\max}}} + 2 \quad (1)$$

- $f_{\min}$ [Hz]: P022 Min motor freq.
- $f_{\max}$ [Hz]: P039 Max motor freq.
- $H_{\min}$ [m]: head of the system at minimum frequency (static head)
- $H_{\max}$ [m]: maximum head of the pump (at zero flow) at maximum frequency. It is generally available in the pump data plate.
- 2 [Hz]: variable safety factor between 2 and 5 Hz.

9.12.2. Shutdown due to minimal irradiation

If a solarimeter is connected to digital input 2, it is possible to set parameter P111 Min. Stop. Rad. from the menu IN/OUT paramet. at a value below which the pump will be stopped after 60 seconds of operation. The device will attempt to restart the pump every XX minutes based on the value specified in parameter P088 Restarts delay.

9.12.3. Stop for minimum flow

It is possible to stop the pump if the flow rate falls below the value set in parameter P109 Min stop flow.

The flow measurement mode is set in the menu IN/OUT paramet. through parameter P107 Flow Measure.

9.13. Control by flow switch

In control mode MPPT, a flow switch can be connected to the device to stop the operation of the pump in the presence of zero flow or in conditions of low irradiation, when the head developed by the pump is not sufficient, or when the delivery is closed. The flow switch, potential-free contact, must be connected to digital input 2 or to terminals 0V, IN2.


The programming of the device, needed to implement the flow switch control, is based on the following parameters:

Menu	Parameter	Description
IN/OUT paramet.	P064 Digit. input IN2	Configuration of digital input 2, to which the flow switch is connected, as Normally Open (pump running with open contact) or Normally Closed (pump running with closed contact).
IN/OUT paramet.	P079 Dig.In.2/3 delay	By setting a value higher than 30 seconds, the device will stop the pump if the flow is zero for more than XX seconds. The pump will restart as soon as the flow switch detects new flow.
Control. param.	P088 Restarts delay	Every XX minutes (default 5 minutes) the inverter will try to restart the pump even if the flow switch detects no flow. If flow is re-established, the pump will continue to run. If the flow remains zero for longer than the delay set for digital input 2, the inverter will stop the pump again.

10. Constant pressure operation

10.1. Introduction

The VASCO Solar - VARIABLE Speed COntroller can manage the running speed of the pump in such a way as to keep the pressure constant as the water demand changes. A pressure sensor placed as close as possible to the pump is used for this purpose.

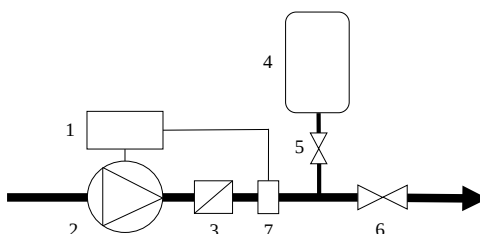

1: Inverter; 2: Pump; 3: Check valve; 4: Pressure vessel; 5: Gate valve; 6: Gate valve; 7: Pressure sensor

10.2. The pressure vessel

In water systems equipped with inverters, the function of the pressure vessel is to compensate for losses (or minimum water consumption) and maintain pressure when the pump is stopped, thus avoiding excessively frequent start/stop cycles. It is of fundamental importance to correctly choose the volume and the pre-charge pressure of the pressure vessel. Too small volumes do not allow effectively compensating the minimum water consumption or the losses when the pump is stopped, while too high volumes make it difficult for the inverter to control the pressure. It is generally sufficient to place a pressure vessel with a volume of about 10% of the maximum flow rate required, considered in liters/minute.

Example

If the maximum flow rate required is 60 l/min, it is sufficient to use a 6 liter pressure vessel.

If the maximum flow rate required is 60 GPM, it is sufficient to use a 6 gallons pressure vessel.



NOTE

If the expansion vessel already exists and has dimensions greater than those recommended, it may be necessary to adjust the parameters P015 Ki And P014 Kp in the menu Control. param. to ensure optimal control.

The pre-charge pressure of the pressure vessel must be approx. 80% of the operating pressure.

Example

If the set pressure in the inverter is 4 bar, the pre-charge pressure of the pressure vessel should be approx. 3.2 bar.

If the set pressure in the inverter is 60 psi, the pre-charge pressure of the pressure vessel should be approx. 48 psi



NOTE

The pre-charge pressure must be adjusted with the system completely unpressurized.

10.3. Electrical connections

The device may be connected to linear pressure sensors with 4 - 20 mA output. The supply voltage range of the sensor must be such as to include the 15 V DC voltage with which the device feeds the analog inputs.

The pressure sensor is connected via the terminals of the analogue input 1, i.e:

- AN1: 4-20 mA signal (-)
- +15V: 15 VDC power supply (+)

The device supports the installation of a second pressure sensor for:

- Operating at constant differential pressure (read the dedicated chapter).
- Automatic replacement of the main pressure sensor in case of failure.
- Exchange of active pressure sensor via digital input.

The secondary pressure sensor is connected via the terminals of the analogue input 2, i.e:

- AN2: 4-20 mA signal (-)
- +15V: 15 VDC power supply (+)



NOTE

In case there is a failure of the analog input AN1 and the parameter P090 AN1 AN2 function is set to value Independent, it is possible to connect the pressure sensor to the analog input AN2 to restore the functioning of the system.

11. Splitting the solar pumping system

11.1. Introduction.

To maximize the efficiency and reliability of a solar pumping system, instead of using a single high-power pump, it is possible to split it into two or more pumps in parallel, each controlled by a variable speed inverter and powered by the same photovoltaic system.


When the system consists of a single pump, in conditions of low irradiance, the pump is often stopped as the photovoltaic power is not sufficient to guarantee its operation.

Vice versa, when the system is split into several lower power pumps, even in conditions of poor irradiation, at least one or more pumps continue to operate supplying water.

This results in a significant increase in the total efficiency of the system.

In addition to this, the following are ensured:

- greater system reliability as, if one pump or inverter fails, the other pumps can continue to operate
- uniformity of pump wear thanks to the alternation of operation managed by the inverters in the unit.

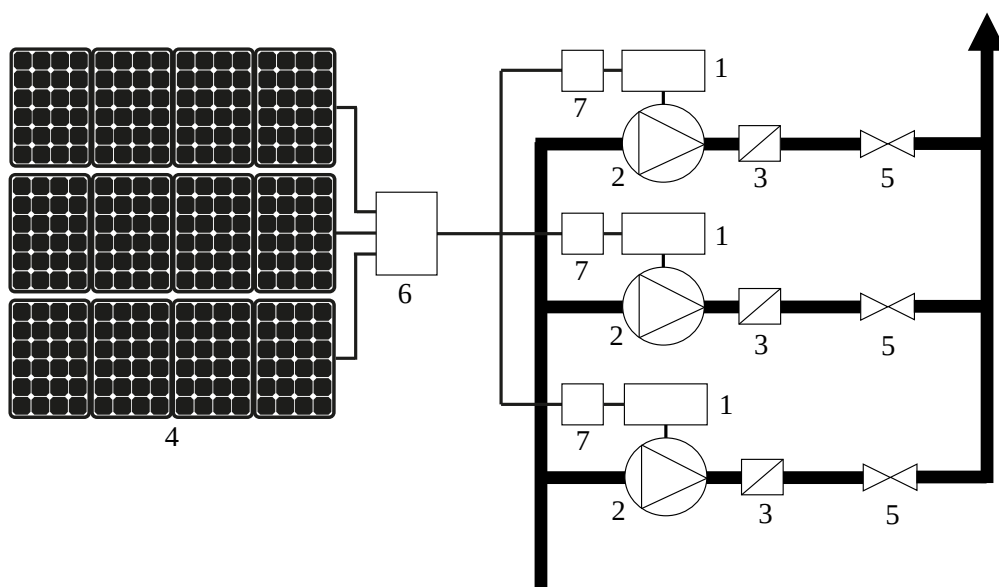

1: Inverter; 2: Pump; 3: Check valve; 4: PV system; 5: Gate valve; 6: Strings combiner with protections; 7: DC disconnector

11.2. Solar pumping unit with two or more pumps in COMBO Solar.

The unit consists of two or more pumps (up to 8) each controlled by an inverter. The inverters are connected to each other via COMBO RS485 serial port.

One inverter is configured as master (address 00) whereas the others are configured as slaves (addresses 01 to 07).

11.2.1. Cascade operating principle.


When the unit is started, a single pump is started at variable speed to maximize the available photovoltaic power (MPPT).

If the photovoltaic power is sufficient to reach the maximum frequency of the pump, the second pump of the unit is started.

If the photovoltaic power is sufficient to reach the maximum frequency also of the second pump, the third pump of the unit is started and so on according to the number of pumps present in the group.

When the irradiation decreases, the pumps are progressively slowed down and stopped in sequence.

11.2.2. Electrical connections.

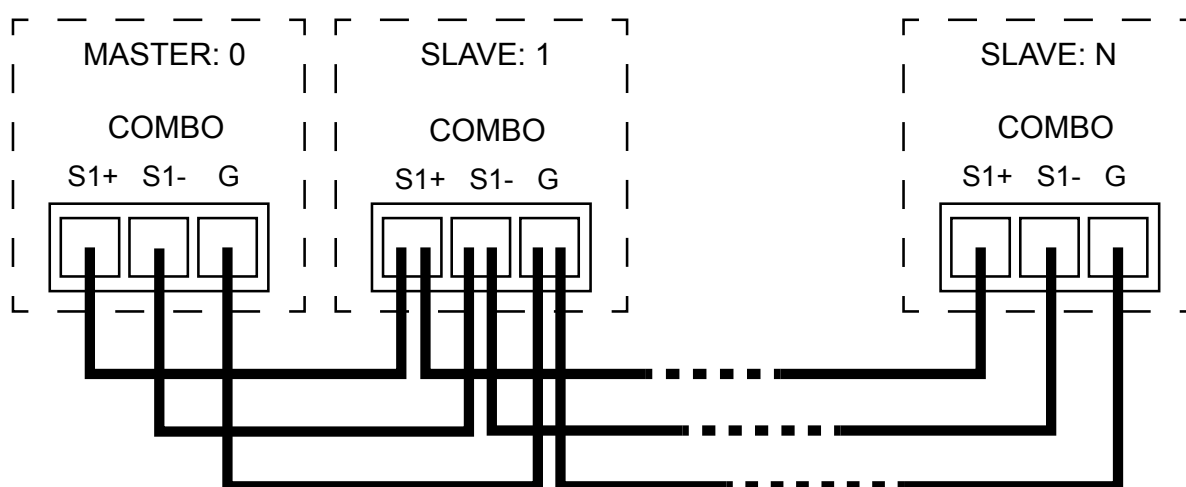

WARNING

Respect the polarity of the connections.



NOTE

To make communication more immune to disturbances, it is recommended to:

- use a braided, shielded cable with the shield connected to the G terminal
- install between S+ and S-, on the first and last node of the system, a termination resistor with a value equal to the cable impedance

11.2.3. Programming the master unit.

Menu	Parameter	Value
Control. param.	P049 COMBO	ON to activate.
Control. param.	P062 Address COMBO	00
Control. param.	P050 Alternance	ON to activate / OFF to deactivate.
Control. param.	P101 Altern. period	Establishes the number of hours of continuous operation after which the pumps in the unit are forced to alternate. The value 0 means 5 minutes.
Control. param.	P057 Start delay AUX	We recommend setting 0 s.
IN/OUT paramet.	P122 Min. Start. Rad.	In COMBO Solar operating mode with solar meter connected, it specifies the additional irradiation value to the irradiation specified by the parameter P111 Min. Stop. Rad. necessary to start another pump in sequence. It is advisable to set this parameter equal to the irradiation value necessary for the operation of a pump in the group at maximum power increased by 10%.

11.2.4. Programming of slave units.

Menu	Parameter	Value
Control. param.	P049 COMBO	ON to activate.
Control. param.	P062 Address COMBO	from 01 to 07.
Control. param.	P050 Alternance	ON to activate / OFF to deactivate. It is possible to determine which devices are included in the alternation and which are not. Devices excluded from the alternation will receive a starting priority based on their address.



NOTE

To start or stop a unit in COMBO mode, simply press the START or STOP button on the master unit only.



NOTE

To change the operating parameters of a COMBO unit, operate on the unit's master.

When the Master Menu is exited, the remote programming of the connected slave units is required. In this manner, all parameters set in the master are also copied to the slaves with the exception of parameter P062 Address COMBO.



CAUTION

When the master menu is accessed, the communication with the slave units is interrupted and the A13 NO COMMUNICATION alarm is produced. Communication is automatically re-established by exiting the Master Menu.



WARNING

In case of pumps in COMBO mode, it is recommended to make the connections to the motor respecting the same phase sequence. In this manner, it will be ensured that by copying parameter P044 Rotation sense from the master unit to the slave units, all the pumps in the unit will maintain the correct running direction.

11.2.5. Automatic master replacement

In COMBO mode, if a slave or the pump connected to it should fail or enter an alarm state, the unit will continue to operate with the remaining units.

In case the master or the pump connected to it should break down or enter an alarm state, the unit will stop for about 30 seconds generating the A13 NO COMMUNICATION alarm in the slaves. After the waiting time has elapsed, the slave with address 1 will become the master, thus allowing the unit to resume operation.

If the master reappears in the unit, the latter will stop again for about 30 seconds, generating the A12 ADDRESS ERROR alarm in the master and in the slave 1.

After the waiting time has elapsed, the master will assume address 0 and the slave address 1, thus allowing the unit to resume operation.



CAUTION

In order to enable automatic master changeover, parameter P043 Autorestart must be set to ON. Do not touch the keypad of the devices during the master replacement process, otherwise the master change process will be interrupted.


12. "Extra Power" function

The "Extra Power" function, in combination with a grid connected inverter or solar charger, allows generating grid energy or charge the batteries when the pump is not running.

Through the dedicated relay output DOL_2, (terminals NO4, COM4, NC4), the device sends a signal to the external device connected to the same photovoltaic system to start or stop its operation. In this way it is possible to guarantee pumping in priority form and generate energy for the grid or charge the batteries under the following conditions:

- The pump has already reached the maximum frequency. This means that excess power is available from the panels which can then be used for generating additional power.

- There is not enough photovoltaic power to run the pump. The device automatically manages the restart of the pump when more power is available.
- The pump has stopped because the tank is full.
- The pump has stopped due to lack of water.
- The pump has stopped for other alarm conditions.

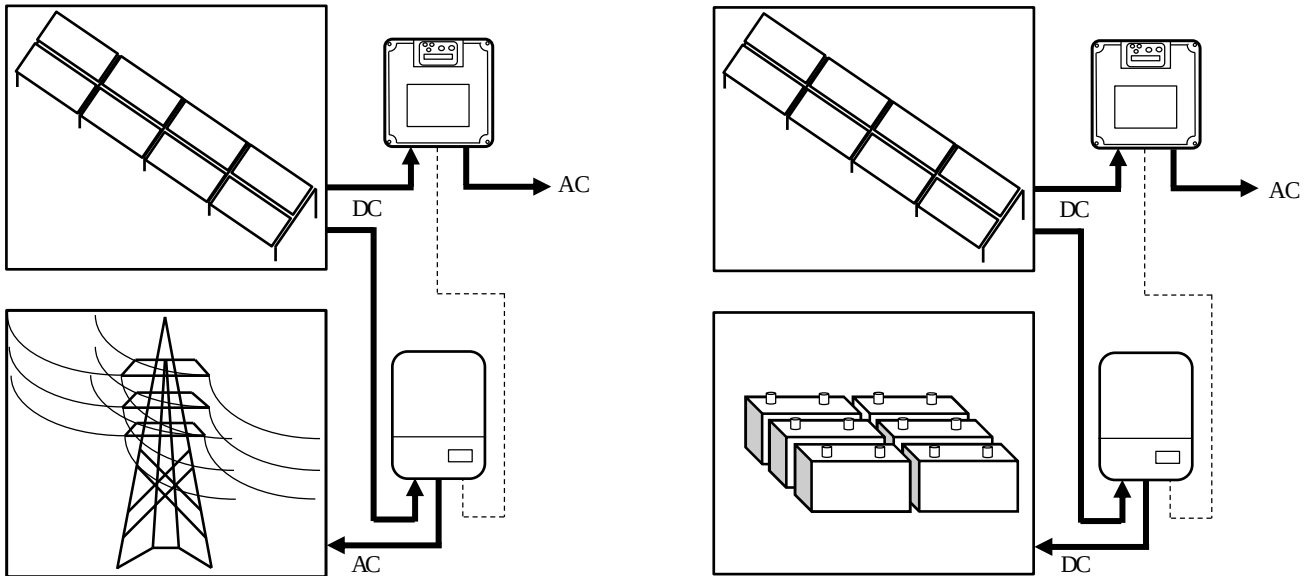

13. Alarms

When an alarm occurs, the device starts emitting an acoustic signal (if available) and an intermittent warning appears on the STATUS screen indicating the corresponding alarm. By pressing the STOP key (only and exclusively in correspondence with the STATUS screen) it is possible to attempt to reset the machine. If the cause of the alarm has not been resolved, the device displays the alarm again and emits an acoustic signal.



WARNING

Immediate remedies must be implemented in case of alarms to safeguard the integrity of the device itself and of the system in which it is installed.

Alarm	Description	Possible solutions
LINE<->MOT INV.	Reverse the connection of the power cable and motor cable.	• Correct the connection of the power and motor cables.

Alarm	Description	Possible solutions
A01 OVERCURRENT MOT.	The current absorbed by the motor exceeds the value set in the parameter P017 Rated motor Amp.. Reset mode: - Automatic reset after 10 seconds for up to 7 attempts, after which you must wait for 60 minutes. - Disconnecting the power supply.	- Verify that the value set for the parameter P017 Rated motor Amp. corresponds at least to the rated current of the motor according to its rating plate data.  NOTE The voltage drop across the inverter (variable between 20 and 40 VAC) causes the motor to be powered at a slightly lower voltage than the one stated on the data plate. The current absorbed by the motor could therefore be slightly higher than the rated current indicated in data plate and, to obtain maximum performance, it is necessary to increase the parameter P017 Rated motor Amp. between 5% and 10%.  WARNING Check with the motor manufacturer the tolerability to withstand a current greater than its rated current. - Check that all the motor phases are correctly connected and that the connection is suitably configured in Star or Delta. - Check that motor parameters are correctly set. - In devices with FOC control, perform a new motor calibration. - In the presence of output filters (dV / dt or sinusoidal), check that they are correctly connected and, in devices with FOC control, check that you have correctly set the parameters P011 PWM and P105 FOC dynamics in relation to the length of the motor cable and the type of filter used. - Check that the pump is turning in the correct direction. - Make sure that the motor is free to rotate and check for any mechanical issues. - Adjust parameter P008 Voltage boost
A02 SENSOR FAULT	The current value read by the analog input is less than 4 mA. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	- Check that the connections on the device side and on the sensor side are correct. - Check that the sensor is fed the correct power. - Check that the sensor is working properly. - If only one sensor is connected to analog input 1, try to connect it to analog input 2.
A03 OVER TEMP. INV.	The temperature reached by the device is higher than the maximum allowed value. Reset mode: Automatic reset	- Check that the ambient temperature is within the allowed limits. - Make sure the device is protected from direct exposure to sunlight or heat sources. - Check that both the external and internal cooling fans (if present) are working properly. - Check that the dissipation channels are clean. - Check that the device is cooled as indicated in the dedicated chapter. - Reduce parameter P011 PWM as much as possible.  NOTE To ensure uninterrupted operation, the inverter automatically reduces the maximum frequency (i.e. power) when the internal temperature reaches a certain threshold. If such frequency reduction is not sufficient to keep the temperature above the maximum permitted value, the inverter will stop the motor and trigger the alarm A03 OVER TEMP. INV..
A04 DRY RUN THRESH.	The warning W26 NO WATER appeared 5 consecutive times following the automatic reset attempts. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	 WARNING When the warning W26 NO WATER appears, the device will automatically restart the load after a time equal to the value set in the parameter P088 Restarts delay multiplied by the number of attempts made. At the end of the fifth attempt, the device will definitively stop the load producing the alarm A04 DRY RUN THRESH.. The alarm must be reset manually.
A05 UNDER VOLTAGE	- Supply voltage below the minimum allowed value. - Insufficient input power to power the device. Reset mode: - Automatic reset if parameter P043 Autorestart = ON	- Check the value of the power supply voltage both under no load and load conditions. - Verify that the source has enough power to power the load.

Alarm	Description	Possible solutions
A06 OVER VOLTAGE	The power supply voltage or the voltage inside the device exceeds the maximum allowed value. Reset mode: Automatic reset if parameter P043 Autorestart = ON	- Check the value of the power supply voltage both under no load and load conditions. - Check for regeneration from the load. - Increase parameter P010 Ramp down time - Increase parameter P012 Ramp f min mot. - In the case of a permanent magnet motor, check that the load is not subjected to passive movement.
A07 MAX. VALUE ALARM	The value read by the analog input is higher than the value set for the parameter P061 Max alarm value. Reset mode: Automatic reset	- Check the value set for the parameter. - Check the hydraulic causes that lead to the alarm condition. - Check that the sensor is working properly.
A08 LOCKED ROTOR	The automatic frequency limitation created by the inverter following an excessive absorption by the motor (beyond the value set in the parameter P017 Rated motor Amp.) causes a reduction of the frequency below the average value between P022 Min motor freq. and P039 Max motor freq.. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	Check the possible solutions for the alarm A01 OVERCURRENT MOT.
A09 OVERLOAD INV.	The current absorbed by the load exceeds the rated current of the device. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	- Check that the rated current of the motor is lower than the rated current of the device. - Make sure that the motor is free to rotate and check for any mechanical issues. - Increase the value of the parameter P009 Ramp up time. - Increase the value of the parameter P012 Ramp f min mot.. - Adjust parameter P008 Voltage boost - Check the value of the power supply voltage both under no load and load conditions.  CAUTION The device can supply power to the load for 10 minutes at a current consumption of 101 % of the rated current of the device, and for 1 minute at a current consumption of 110 % of the rated current of the device.
A10 IGBT TRIP ALARM	The current absorbed by the load instantaneously exceeds the maximum current protection of the device's power module. Reset mode: - Automatic reset after 10 seconds for up to 3 attempts, after which you must wait for 60 minutes. - Disconnecting the power supply	- Check the possible solutions for alarms A01 OVERCURRENT MOT. and A09 OVERLOAD INV.. - Check for short circuits between the output phases and the ground insulation. - Check that the system is properly grounded. - Check for electrical noise from other devices connected to the system.  WARNING In the presence of an alarm A10 IGBT TRIP ALARM, if the power supply to the device is removed, it is strongly recommended to verify the isolation of the load from the ground before supplying power to the device. In fact, if the insulation to the ground were to be compromised, when power is supplied, irreversible damage to the device could occur
A11 NO LOAD	The current absorbed by the load is too low in relation to the parameter P017 Rated motor Amp.. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	Check the possible solutions for the alarm A01 OVERCURRENT MOT.
A12 ADDRESS ERROR	In COMBO mode, multiple devices in the group have the same address. Reset mode: Automatic reset	- Restore the correct value of parameter P062 Address COMBO in all the devices in the group. - Verify which situation triggers the alarm. - If the alarm is triggered after a master replacement, check that the parameter P043 Autorestart is activated. - Check the electrical connection between the slave unit and the master, and the presence of possible disturbances.

Alarm	Description	Possible solutions
A13 NO COMMUNICATION	In COMBO mode, the communication between the slave unit and the master has been interrupted. Reset mode: Automatic reset	- Check the electrical connection between the slave unit and the master, and the presence of possible disturbances. - Exit the master programming menu. - Attempt a manual reset of the alarm.  CAUTION Keep signal cables separate and never parallel to power cables. If it is necessary to cross them, make sure that they cross perpendicularly.
A14 MIN. VALUE ALARM	The value read by the analog input is lower than the value set for the parameter P016 Min alarm value. Reset mode: Automatic reset	- Check the value set for the parameter. - Check the hydraulic causes that lead to the alarm condition. - Check that the sensor is working properly.
A15 KEYBOARD FAULT	One of the keys of the keyboard was held down for more than 30 seconds. Reset mode: - Alarm reset by STOP key. - Disconnecting the power supply	Check that the keys are mechanically free.
A16 CPU ALARM	Communication error between the control part and the power part or error in the CPU. Reset mode: Automatic reset	- Check the value of the power supply voltage both under no load and load conditions. - Check for electrical noise from other devices connected to the system. - Check the integrity of the communication cable between the control board and the power board.
A17 BRAKE ALARM	In devices equipped with brakes, it indicates the achievement of the maximum energy that the braking resistor can withstand. Reset mode: Automatic reset if parameter P043 Autorestart = ON	Check the possible solutions for the alarm A06 OVER VOLTAGE .
A18 BRAKE OVERTEMP	In devices equipped with brakes, it indicates when the maximum temperature of the braking resistor has been reached. Reset mode: Automatic reset if parameter P043 Autorestart = ON	- Check the possible solutions for the alarm A06 OVER VOLTAGE . - Check that the braking resistor is working properly.
A19 OUT OF STEP	With parameter P102 Motor type set to Synchronous PM, the loss of motor control occurs. Reset mode: Automatic reset with a 3-minute delay.	Check the possible solutions for the alarm A01 OVERCURRENT MOT.
A20 INPUT PHASE LOSS	Absence of a power supply phase. Reset mode: Automatic reset if parameter P043 Autorestart = ON	- Check that all power phases are present. - Check the balance of the power supply phases.
A22 AL. TEMP. MOT.	The temperature measured by the PT100 or PT1000 probe has reached the value set in the parameter P129 PT alarm value and the device stops the motor. Reset mode: Automatic reset when the temperature falls below the parameter P130 PT restart value.	- Check that the motor is cooled correctly. - Check the value set for the parameter P129 PT alarm value.

14. Warnings

Warning	Description	Possible solutions
W01 ACTIVE DIG.IN. 1	Digital input 1 has been activated.	Check the configuration and connections to digital input 1.
W02 ACTIVE DIG.IN. 2	Digital input 2 has been activated.	Check the configuration and connections to digital input 2.
W03 ACTIVE DIG.IN. 3	Digital input 3 has been activated.	Check the configuration and connections to digital input 3.
W04 ACTIVE DIG.IN. 4	Digital input 4 has been activated.	Check the configuration and connections to digital input 4.
W15 Emerg. mode ON	Emergency mode activated	- Check that the parameter is set correctly P151 Emergency mode - Check the configuration and connections to digital input 3.  WARNING Read the dedicated chapter carefully, fully understanding the risks and implications.
W17 MIN. RADIATION	In control mode MPPT, when parameter P110 Solarimeter F.S. is greater than 0, the irradiation reading has fallen below the value set for parameter P111 Min. Stop. Rad..	Check that the parameters P110 Solarimeter F.S. and P111 Min. Stop. Rad. are set correctly.
W18 MINIMUM FLOW	In control mode MPPT, when parameter P107 Flow Measure is active, the flow rate reading has fallen below the value set for parameter P109 Min stop flow.	Check that the parameters P107 Flow Measure and P109 Min stop flow are set correctly.
W19 ACTIVE DIG.IN.FS	In control mode MPPT, when parameter P079 Dig.In.2/3 delay is greater than 30 seconds, the digital input 2, to which the flow switch is connected, has been activated.	- Check the correct configuration of digital input 2. - Check the correct operation of the flow switch and the connection to digital input 2. - Check the value of parameter P079 Dig.In.2/3 delay.
W20 TEMP. DERATE	The inverter is limiting the maximum motor frequency to keep the inverter temperature below the maximum limit.	Check the possible solutions for the alarm A03 OVER TEMP. INV..
W21 OVERLOAD 15V	15V power supply overload.	Check the absorption of the loads and any short circuits connected to the 15V power supply
W22 EEPROM COM.	No communication with EEPROM	Contact the technical support service.
W23 EEPROM FAULT	Failure in EEPROM	Contact the technical support service
W24 LOW PV ENERGY	The energy from the photovoltaic panels is insufficient to drive the motor until it reaches its minimum frequency. The inverter attempts an automatic start every 5 minutes.	- Check the available photo voltaic power in relation to the motor and pump power. - Check the series and parallel connections of the photovoltaic panels. - Check the photovoltaic system open circuit voltage and short circuit current. - Check the short-circuit current of the photovoltaic system. The short-circuit current is proportional to the available irradiation. - Check the available power in relation to the available irradiation. - Check that the surface of all panels is clean and free from shading (even partial). - Check that the value of parameter P022 Min motor freq. is not too high compared to parameter P039 Max motor freq.. It usually doesn't exceed 80%. - Check the other motor parameters.
W25 ALARM SLAVE X	In control mode P049 COMBO, the master has detected an alarm in the X slave.	Check the status of the XX slave unit indicated by the master.
W26 NO WATER	The value read by the device is permanently below the value set in the parameter P020 Dry run thresh..	- Check that the pump is properly primed. - Check that the pump is turning in the correct direction. - Verify that the parameter P020 Dry run thresh. is correctly set.
W27 BLOCK START/STOP	The START/STOP buttons have been locked.	Press the START or STOP button for at least 5 seconds to release the lock.
W29 FREQ. RESTARTS	The motor has been restarted periodically too many times. This warning does not involve stopping the motor, but simply serves as an indication for checking the system.	- Check that there are no leaks in the system. - Check the correct volume and pre-charge pressure of the expansion tank. - Check the correct setting of the parameters P003 Delta start , P087 Delta control , P058 Delta stop , P085 Control ramp
W30 MOT. TEMP. DERATE	The temperature measured by the PT100 or PT1000 probe has reached the value set in the parameter P128 PT warning value and the device reduces the motor frequency to keep the temperature down.	- Check that the motor is cooled correctly. - Check the value set for the parameter P128 PT warning value.

**NOTE**

In the presence of three-phase asynchronous motors, if the parameter P131 Dry run paramet. be set to Cosphi, the correct value to set for the parameter P020 Dry run thresh. depends on:

- The type of motor (construction and winding data). Generally, three-phase surface motors have a higher rated cosphi than submersible motors having the same power rating.
- The type of pump (hydraulic performance and power consumption curve).
- The power supply characteristics (voltage and frequency).

Usually the parameter P020 Dry run thresh. can be set to 60% of the normal cosphi reported on the pump plate data.

The parameter P020 Dry run thresh. it must also be determined empirically at the end of the installation. In the presence of centrifugal pumps with three-phase asynchronous motor, a simple method consists of starting the pump at the nominal frequency and, paying attention to the sustainability of the system, completely closing the supply by reading the value of cosphi measured on the display (or on the App). The parameter P020 Dry run thresh. it must therefore be set at 10% less than the value of cosphi read in a closed flow condition.

**CAUTION**

Electronic water shortage protection based on the parameter P020 Dry run thresh. works properly only with centrifugal pumps equipped with a three-phase asynchronous motor.

In the presence of permanent magnet motors, it is not possible to base the protection of lack of water on the read value of the cosphi but it is necessary to rely on the current absorbed.

In the presence of other types of pumps and motors, it is advisable to contact the technical support service.

**WARNING**

If the parameter P020 Dry run thresh. is set too low, the electronic water shortage protection may no longer be effective.

Typically, it is recommended not to go below the value of 0.5 with centrifugal surface pumps and 0.4 with centrifugal submersible pumps equipped with asynchronous three-phase motor.

The parameter setting P020 Dry run thresh. A 0 completely excludes the protection of lack of water.

15. EC Declaration of Conformity

The manufacturer hereby:

Nastec srl

Via della Tecnica, 8, 36048, Barbarano Mossano, Vicenza, Italy

declares under its own responsibility that the product:

VASCO Solar - VArIable Speed COntroller

complies with the following directives:

- 2014/53 / EU Radio Equipment Directive (RED)
- 2011/65 / EU - RoHS Directive
- 2015/863/EU - RoHS 2 Directive
- 2014/35 / EU - Low Voltage Directive (LVD)
- 2014/30 / EU - EMC Directive

and that the following harmonized standards and technical specifications have been applied:

- EN 61000-6-4:2019
- EN 61000-3-2:2019 + A1:2021
- EN 61000-3-3:2013+A1+A2:2021
- EN 61000-6-2:2019
- EN 61800-3:2018
- EN 62233:2008
- ETSI EN 301 489-17 V3.1.1:2017
- ETSI EN 301 489-1 V2.1.1:2017
- ETSI EN 300 328 V2.1.1:2016-11
- EN 60529:1991+AC:1993+A1:2000+A2:2013+AC:2016+AC:2019
- EN 60335-1:2012+A11+A13+A1+A14+A2+A15:2021
- EN 63000:2018
- EN 62109-1:2010
- EN 62109-2:2011

Barbarano Mossano

15/11/2018

Ing. Marco Nassuato

Managing Director



16. UK Declaration of Conformity

The manufacturer hereby:

Nastec srl

Via della Tecnica, 8, 36048, Barbarano Mossano, Vicenza, Italy

declares, under its own responsibility, that the product:

VASCO Solar - VArIable Speed COntroller

complies with the following directives:

- UK SI 2017 No. 1206 Radio Equipment Regulations 2017
- UK SI 2012 No. 3032. Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS2)
- UK SI 2016 No. 1101. The Electrical Equipment (Safety) Regulations 2016
- UK SI 2016 No. 1091. Electromagnetic Compatibility Regulations 2016

and that the following harmonised standards and technical specifications have been applied:

- BS EN 61000-6-4:2019
- BS EN 61000-3-2:2019 + A1:2021
- BS EN 61000-3-3:2013+A1+ A2:2021
- BS EN 61000-6-2:2019
- BS EN 61800-3:2018
- BS EN 62233:2008
- ETSI EN 301 489-17 V3.1.1:2017
- ETSI EN 301 489-1 V2.1.1:2017
- ETSI EN 300 328 V2.1.1:2016-11
- BS EN 60529:1991+AC:1993+A1:2000+A2:2013+AC:2016+AC:2019
- BS EN 60335-1:2012+A11+A13+A1+A14+A2+A15:2021
- BS EN 63000:2018
- BS EN 62109-1:2010
- BS EN 62109-2:2011

Barbarano Mossano

02/03/2022

Ing. Marco Nassuato

Managing Director



